MetPak™PRO

Base Station

User Manual

Weather Station

Part 1723-1B-2-111 (Firmware Issue 2436 4.00 onwards)

Doc No: 1723-PS-0017

Issue 2

Gill Instruments Limited
Saltmarsh Park, 67 Gosport Street, Lymington,
Hampshire, SO41 9EG, UK
Tel: +44 1590 613500, Fax: +44 1590 613555
Email: anem@gillinstruments.com Website: www.gillinstruments.com

Foreword

© 2011 Gill Instruments Ltd. All rights reserved.

Thank you for purchasing the MetPak Pro Base Station manufactured by Gill Instruments Ltd. To achieve optimum performance we recommend that you read the whole of this manual before proceeding with use.

Gill products are in continuous development and therefore specifications may be subject to change and design improvements without prior notice.

The information contained in this manual remains the property of Gill Instruments and should not be copied or reproduced for commercial gain.

Guarantee

For terms of guarantee, please contact your supplier.

Trademarks

Microsoft and Windows are registered trademarks of Microsoft Corporation.

All other brands and product names are trademarks or registered trademarks of their respective owners.

Cautions and Notes

The following symbols are used in this guide:

CAUTION. This indicates an important operating instruction that should be followed to avoid any potential damage to hardware or property, loss of data, or personal injury.

NOTE. This indicates important information to help you make the best use of this product.

Applicable Parts

MetPak Pro Base Station 1723-2A-1-111 (Base Station only).

MetPak Pro Base Station 1723-2A-2-111 (with White WindSonic Option 2).

MetPak Pro Base Station 1723-2A-3-211 (with Heated WindSonic M).

MetPak Pro Base Station 1723-2A-4-311 (with Heated WindObserver).

MetPak Pro Base Station 1723-2A-5-111 (with WindMaster).

MetPak Pro Base Station 1723-2A-6-111 (with WindMaster Pro).

Contents

1. Introduction 1

1.1 Principle of Operation 2
1.1.1 Wind Speed and Direction Sensor 2
1.1.2 Radiation Shield 3
1.1.3 Temperature and Relative Humidity Sensor with Dewpoint Output 3
1.1.4 Barometric Pressure 3
1.1.5 Sensor Inputs 3

1.2 Abbreviations 4

2. Installation 5

2.1 Pre-Installation Checks 5
2.1.1 Spare Parts 5

2.2 Installation 6
2.2.1 Bench system test 6
2.2.2 Bench Test Equipment Required 6
2.2.3 Cabling 7
2.2.4 Communication and Power Connections 14
2.2.5 Analogue, Digital and PRT Input Connections 18
2.2.6 MetPak Pro Base Station System Connections 21
2.2.7 Mounting MetPak Pro Base Station 27
2.2.8 Mounting MetPak Pro Base Station Junction Box 29
2.2.9 Mounting MetPak Pro Base Station Heater Power Interface Box (Optional Item) 31

3. Operation 33

3.1 Start Guide 33

3.2 MetView 35
3.2.1 Opening MetView 35
3.2.2 Scanning for Devices 36
3.2.3 The MetView Console 37
3.2.4 MetView Console Display Options 39
3.2.5 MetView Gauge Ranges and Graphs 40
3.2.6 Data logging 42

3.3 MetPak Pro Base Station Configuration 45

3.4 Configuring MetPak Pro Base Station with MetSet 47
3.4.1 Opening MetSet 47
3.4.2 MetSet Editing Screen 49
3.4.3 Monitoring MetPak Pro Base Station Output Data Using HyperTerminal. 57
3.4.4 Configuring MetPak Pro Base Station for SDI-12 59

© Gill Instruments Ltd

3.4.5 SDI-12 Commands 59
3.4.6 Configuring MetPak for MODBUS 64
3.4.7 Safe Mode 67

4. Troubleshooting 69

4.1 Fault-Finding 69

4.2 Servicing 71

4.3 Bench Tests 71

5. Maintenance 73

6. Technical Information i

6.1 Specification i

6.2 MetPak Pro Base Station Hub PCB Connections iv

6.3 Electrical Conformity Certificate vi

Figures

Figure 1 U and V Compass points 2 Axis Instruments 2
Figure 2 Position of Temperature and Relative Humidity Probe in the Radiation Shield 3
Figure 3 Internal view of the hub box (top circuit board removed). 14
Figure 4 Hub Box with Analogue and Digital Pec fitted. 15
Figure 5 Connection of Gill USB Cable (Part No. 1723-10-051) 15
Figure 6 RS232 connections 16
Figure 7 RS422 connections 16
Figure 8 RS485 Connections 17
Figure 9 SDI-12 connections 17
Figure 10 MetPak Pro Base Station Example System Pictures 22
Figure 11 Mounting and Dimensions for MetPak Pro Base Station 28
Figure 12 Opening MetView Screen 35
Figure 13 Scanning for MetPak Pro Base Station Devices 36
Figure 14 The MetView Console 37
Figure 15 MetView Gauge Range 40
Figure 16 MetView Graph 41
Figure 17 Setting up data logging 42
Figure 18 Opening MetSet Screen 47

Tables

Table 1 Abbreviations 4
Table 2 Recommended Belden cable types 12
Table 3 Maximum cable lengths for supported communication and sensor network 13
Table 4 Connection status indicators 37
Table 5 MetView scale and unit options 39
Table 6 MetView averaging options 39
Table 7 Max/min markers 39
Table 8 MetView Screen Settings Options 39
Table 9 Default configuration settings 45

Table 10	MetPak Pro Base Station Commands	58
Table 11	Common problems and their solution	69
Table 12	Status codes as output with the MetPak Pro Base Station data string	70
Table 13	HygroClip connections (6-way connector J1)	iv
Table 14	Wind Sensor 10 Metre Cable connections (8-way connector J4)	iv
Table 15	PC communications (8-way connector, J5)	v
Table 16	PRT Sensor (4-way connector, J7)	v
Table 17	Digital Switch Input (2-way connector, J8)	v
Table 18	Analogue Sensors Input (8-way connector, J9)	v

© Gill Instruments Ltd

1. Introduction

MetPak Pro Base Station is a compact multi-sensor instrument that measures the most essential weather parameters. It also provides a data collection system that allows customers to add their own selection of sensors to meet local requirements. A Gill Instruments Ultrasonic Sensor can be used to measure wind speed and direction. Temperature and Humidity are measured and Dewpoint calculated using an industry standard probe housed in a naturally aspirated radiation shield. Barometric pressure is measured using an industry standard sensor.

The Wind Sensor can be chosen from a 2 axis WindSonic Option 2 (white), WindSonic M Heated, WindObserver 70 enhanced heated or a 3 axis WindMaster or WindMaster Pro.

The customer is able to add up to four additional sensors. One PRT (temperature sensor), one digital (contact closure rain gauge) and two analogue inputs (4-20mA or 0-5V) e.g. water level sensor, pyranometer, pressure sensor, soil temperature etc. Other types of sensors may be added limited by the number of inputs available.

The MetPak Pro Base Station combines all the instrument data into a single combined data string. This may be configured for digital ASCII RS232/RS422/RS485 (2 wire point to point) and digital MODBUS RTU/ASCII and SDI-12 outputs.

The instrument uses a rugged mounting clamp that attaches to any vertical pipe up from 30mm to 58mm diameter.

The Base Station electrical Hub box comes with a pre-installed 10 Metre cable to connect to a Gill Wind Sensor. There is one cable gland allocated to provide entry for termination of other sensors and one cable gland for data/power cables.

A separate Junction box (optional accessory) is available for termination of external sensors, power and communication cables.

A Heater Interface box (optional accessory) allows for termination of the Base Station 10 Metre cable to a heated Wind Sensor and Heater power supply.

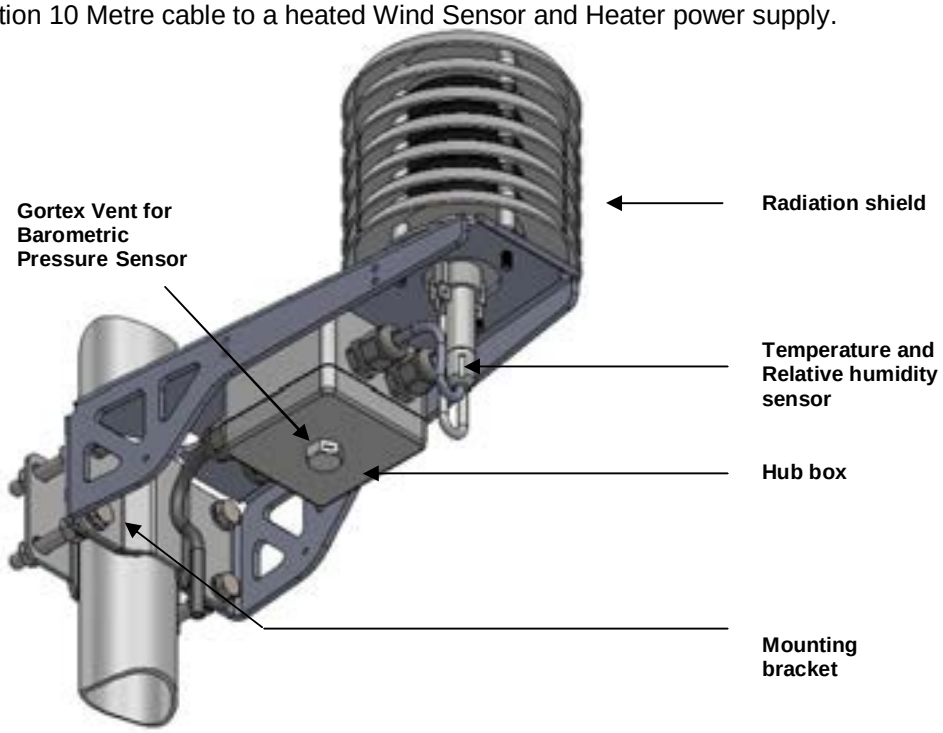

Figure 1 MetPak Pro Base Station

© Gill Instruments Ltd

1.1 Principle of Operation

1.1.1 Wind Speed and Direction Sensor

The MetPak Pro Base Station can be used with Gill 2axis (WindSonic or WindObserver) or 3 axis (WindMaster or WindMaster Pro) wind speed and direction sensors. They are connected via the supplied RS422 10 Metre cable. The sensors measure the times taken for an ultrasonic pulse of sound to travel from the North transducer to the South transducer, and compares it with the time for a pulse to travel from S to N transducer. Likewise times are compared between West and East, and E and W transducer.

If, for example, a North wind is blowing, then the time taken for the pulse to travel from N to S will be faster than from S to N, whereas the W to E, and E to W times will be the same. The wind speed and direction can then be calculated from the differences in the times of flight on each axis. This calculation is independent of factors such as temperature.

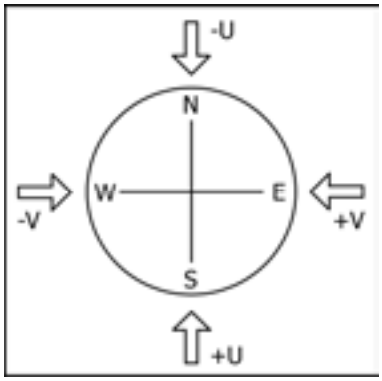

Figure 1 U and V Compass points 2 Axis Instruments

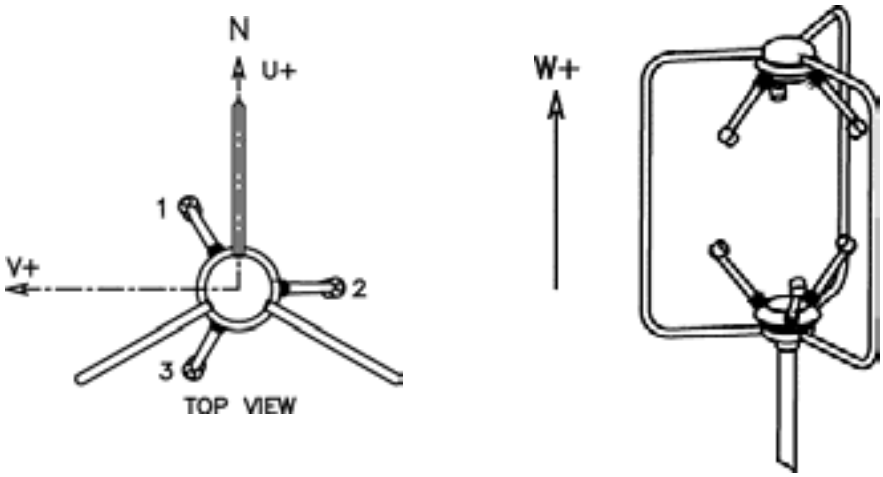

Figure 2 Compass points and polarity of U, V and W on a 3 axis instrument.

© Gill Instruments Ltd

1.1.2 Radiation Shield

A MetSpec Multi-Plate Radiation Shield provides excellent protection to the Rotronics temperature and relative humidity sensor, shielding the probe from unwanted errors, especially from secondary upward reflecting solar radiation and/or wind blown precipitation/airborne contaminants. The special shield plate geometry, with its double louvre design, provides excellent response time performance of quick ambient temperature changes while still working effectively as a baffle to stop larger contaminants such as salt or dirt from reaching the Rotronics probe. Due to the increased protection offered to the Rotronics probe by the MetSpec shield, the maintenance cycle can be extended (see Para 5.2). The shield benefits from very robust material choice and extremely high UV protection requiring no maintenance. A further benefit of the MetSpec shield design is that the measured temperature is now even closer to reference temperature measurements made using artificially aspirated motors without the drawbacks of such systems (power and the maintenance of moving parts).

1.1.3 Temperature and Relative Humidity Sensor with Dewpoint Output

The Rotronic HygroClip module is a complete instrument, with integrated temperature compensation. Calibration data is maintained within the integrated electronics. It provides digital output signals for Relative Humidity, Temperature and Dewpoint to the MetPak Pro Base Station Hub box.

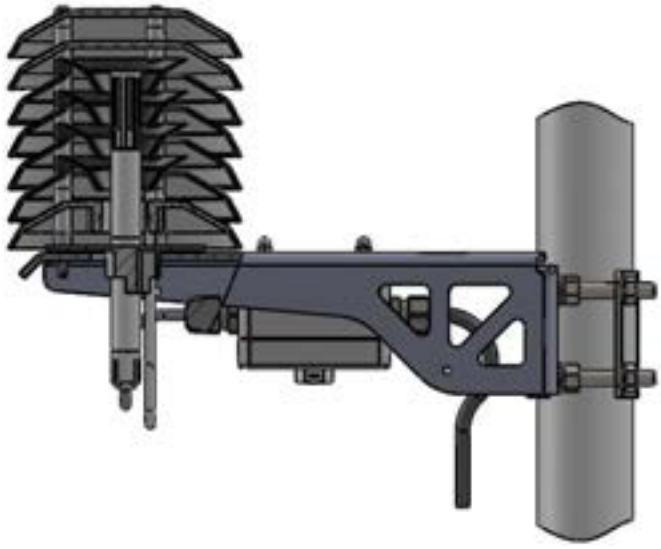

Figure 2 Position of Temperature and Relative Humidity Probe in the Radiation Shield

1.1.4 Barometric Pressure

Barometric pressure output is provided by a solid-state device fitted on to the circuit board in the MetPak Pro Base Station Hub box. Vent to atmosphere is via a Gortex filter which also protects the pressure sensor from the effects of wind and rain.

1.1.5 Sensor Inputs

Two analogue inputs, 0-5V or 4-20mA (loop or self-powered).

One four wire PRT 100 input conforming to IEC 60751.

One Digital input, detects when two dedicated terminals are short circuited (less than 1k ohm).

© Gill Instruments Ltd

1.2 Abbreviations

Table 1 Abbreviations

Item	Meaning
ASCII	American Standard Code for Information Interchange
C	Centigrade
CAL	Calibration
CD	Compact Disc
COM	Communications
CR	Carriage Return
CSV	Comma Separated Variable
ETX	End of String
F	Fahrenheit
FPM	Feet per Minute
HF	High Frequency
HPA	Hecto-Pascals
HTML	Hyper Text Markup Language
Hz	Hertz
IMM	International Maritime Mobile
In Hg	Inches of Mercury
K	Kelvin
KPH	Kilometres per Hour
KTS	Knots
LF	Line Feed
M Bar	Milli Bars
Max	Maximum
MF	Medium Frequency
Min	Minimum
Mm Hg	Millimetres of Mercury
MPH	Miles per Hour
MS	Microsoft
MS	Metres per Second
NSEW	North South East West
NVM	Non-Volatile Memory
PC	IBM compatible Personal Computer
ROM	Read Only Memory
RS232	Communications standard
RS422	Communications standard
Rx	Receive
RXD	Received Data
SDI-12	Serial – Data Interface standard for microprocessor based sensors
STX	Start of String
Tx	Transmit
TXD	Transmitted Data
VHF	Very High Frequency
WMO	World Meteorological Organisation

© Gill Instruments Ltd

2. Installation

MetPak Pro Base Station has been designed to meet and exceed the stringent standards listed in its specification (see Para 6.1).

2.1 Pre-Installation Checks

As with any sophisticated electronics, good engineering practice should be followed to ensure correct operation:

- Ensure the MetPak Pro Base Station and Wind Sensor will not be affected by other equipment operating locally, which may not conform to current standards, e.g. radio/radar transmitters, generators etc.
- Avoid mounting in the plane of any radar scanner – a vertical separation of at least 2m should be achieved.
- When installing MetPak Pro Base Station and Wind Sensor near radio transmitting antennas, ensure that the mounting position fulfills the following minimum separations (all round):
- VHF IMM – 1m
- MF/HF – 5m
- Satcom – 5m (avoid likely lines of sight)
- Use cables recommended by Gill (see Para 2.2.3). If cables are cut and re-connected incorrectly (perhaps in a junction box) then EMC performance may be compromised if cable screen integrity is not maintained.
- Avoid earth loops – wire the system in accordance with these installation guidelines.
- Ensure that the power supply operates to the MetPak Pro Base Station and Wind Sensor specification (see Para 6.1) at all times.
- Avoid turbulence caused by surrounding structures that will affect the accuracy of the sensors such as trees, masts and buildings. The WMO make the following recommendations. The standard exposure of wind instruments over level open terrain is 10m above the ground. Open terrain is defined as an area where the distance between the sensor and any obstruction is at least 10 times the height of the obstruction.
- Keep away from building exhaust vents, machinery and motors.

2.1.1 Spare Parts

1723-PK-201	Junction Box with internal terminating pcb.
1723-PK-202	Terminating pcb (to mount in customer box).
1723-PK-204	Pack of 4 feet for Panel Mounting the Junction Box.
1723-PK-203	Pack of 4 brackets for Pole Mounting the Junction Box.
1723-10-051	RS232 to USB 1.8M configuration cable (excluding WindObserver and WindMaster/Pro connected units).
1723-PK-024	Pressure Sensor Filter Spares kit.
1723-PK-025	Hygroclip Filter Replacement Kit (2 Filters).
1723-PK-099	Heater Power Interface Box.

2.2 Installation

2.2.1 Bench system test

Prior to physically mounting the MetPak Pro Base Station in its final location, we strongly recommend that a bench system test is carried out to confirm the system is configured correctly, is fully functional and electrically compatible with the selected host system and cabling (preferably utilising the final cable length). The required data format, units, output rate, and other options should also all be set up at this stage.

2.2.2 Bench Test Equipment Required

1723-2A-X-XXX/X MetPak Pro Base Station set for RS232 communication (factory default setting).

1723-10-051 MetPak Pro Base Station RS232 to USB 1.8M configuration cable with integral 5v power (for WindSonic units only). Otherwise use RS232 I/F converter and separate 12v to 30 dc power supply.

ES-U-1001-A EasySynch RS232 to USB adaptor or equivalent (if not using Gill part 1723-10-051) or connect directly to an RS232 COM port.

Power Supply 12Vdc to 30Vdc at 100mA if required.

Belden 9503 3 pair communications and power cable (if not using Gill Part 1723-10-051), length as required.

Belden cable with up to 6 pairs for Analogue, Digital and PRT inputs.

Gill MetSet Software supplied on the MetPak Pro Base Station CD or download from. http://www.gill.co.uk/main/software.html

Wind Sensor- should be configured as per the following list:-

1405-PK-072 WindSonic Option 2 White

M4,U1,O1,L1,P1,B4,H2,NQ,F1,E2,T1,S4,C2,G0,K0,

1405-PK-200 WindSonic M Heated

M4,U1,O1,L1,P1,B4,H2,NQ,F1,E2,T1,S4,C2,G0,K0,

1390-70-B-313 WindObserver 70 heated with short connector base.

Note - Firmware Version V 6.02 onwards
A0,B4,C1,E1,F1,G0000,H2,J1,K1,L1,M4,NQ,O1,P1,T1,U1,V1,X1,Y1,Z1

1590-PK-020 WindMaster

M4,U1,O1,L1,P1,B4,H2,NQ,E1,T1,S1,C2,A4,I1,J1,V1,X1,G0,K0,F1 1,F2 0,F3 1

1561-PK-020 WindMaster Pro

M4,U1,O1,L1,P1,B4,H2,NQ,E1,T1,S1,C2,A4,I1,J1,V1,X1,G0,K0,F1 1,F2 0,F3 1

For Power Supply/Supplies and cables suitable for the chosen Wind sensor see relevant wind sensor manual supplied with the sensor or download from http://www.gill.co.uk/data/manuals/manuals.htm .

© Gill Instruments Ltd

2.2.3 Cabling

Base Station RS422 10 Metre Cabling

The MetPak Pro Base Station comes with an integral 10 Metre, Belden 8104 cable fitted to the hub box connector J4, (RS422 interface).

It is terminated in Clipper connector solder contacts for installing into a WindSonic Option 2 or WindMaster/WindMaster Pro Connector (connectors supplied with the Wind Sensor).

If used with a WindObserver 70 or WindSonic M the contact pins will need to be cut off and wire stripped/soldered for termination into the Heater Power Interface Box.

Details on fitting the connector pins on the 10 Metre cable into the WindSonic option 2 or WindMaster/WindMaster Pro connector are as follows:-

If shortening the 10 Metre cable to a required length, strip and prepare as follows:-

1. Trim back the screened cable outer PVC sheath to 52mm.
2. Trim back the braid and drain wire to 20mm from the outer sheath.
3. Separate braid and drain wire from the foil and cores. Twist braid and drain wires together.
4. Trim the twisted braid and drain wire to 15mm from the outer sheath and tin ends 5mm.
5. Cut the foil and White/Green wire back to within 5mm of the outer sheath.
6. Strip and tin one end of the White/Green wire removed to 5mm.
7. Locate White/Green wire to twisted braid and drain wire and solder.
8. Insulate the White/Green wire joint.
9. Strip back the connection wires by 4mm and tin solder.
10. Solder the contact pins supplied with the connector to the wires.
11. Note that the sensor connector supplies the correct strain relief for cables with an outside diameter of 6-12mm.

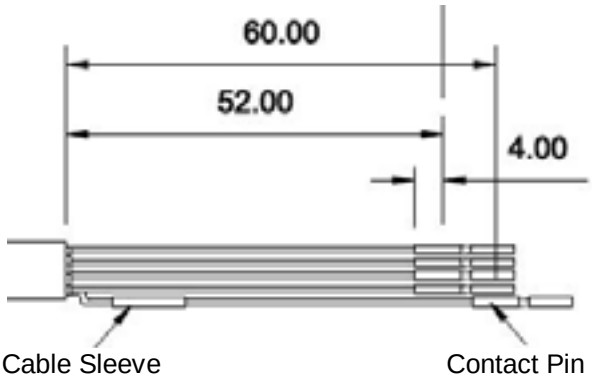

Route the cable through the connector parts as in direction shown below (WindSonic connector shown, the WindMaster Connector is similar).

Whilst squeezing the red retainer in the direction of ARROWS A, pull in the direction of ARROW B.

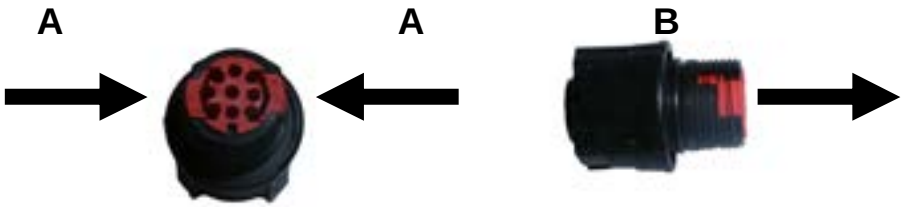

Your connector should now resemble the connector in the picture below.

Insert each contact pin until you feel a slight click. If you have inserted the contact into the incorrect hole it can be removed at this point by simply pulling it out. Please note there will be some resistance.

WindSonic (Option 2) RS422 10 Metre Cable Connections

Connections for the WindSonic connector are as follows:-

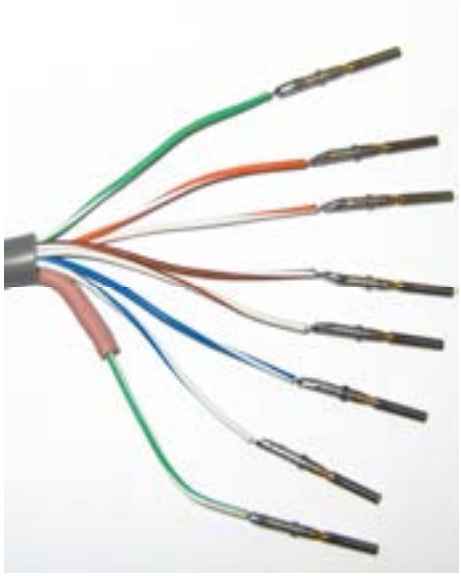

Green/White wire to Connector Pin 1

Orange/White wire to Connector Pin 2

White/Orange wire to Connector Pin 3

Brown/White wire to Connector Pin 4

White/Brown wire to Connector Pin 5

Blue/White wire to Connector Pin 6

White/Blue wire to Connector Pin 7

White/Green cut off at sleeve

Rear View of Connector

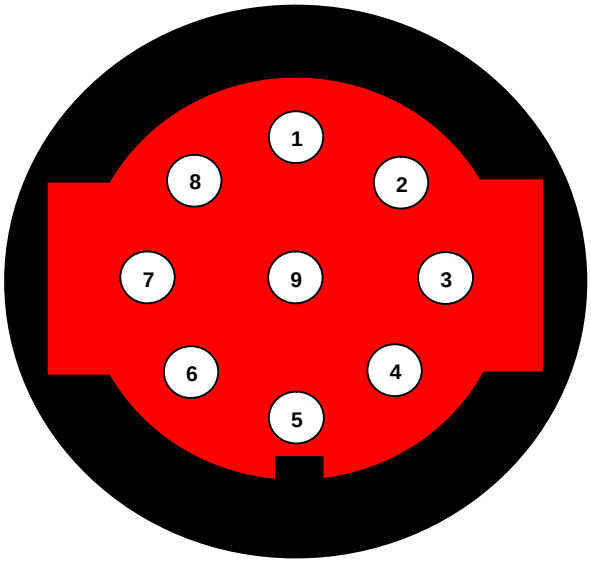

© Gill Instruments Ltd

Continue to insert all of the contacts you require. Once all of the contacts are inserted squeeze the 2 red retainers (See Arrows A on previous page) into place. NB. The retainer can only be pushed back into place if the contacts are fully engaged.

Fit the connector to the WindSonic Sensor so that you can finish assembling the connector.

Screw the back shell onto the connector until it is fully in place. Please note that the final rotations can be slightly stiff.

Now screw the next part of the connector into place.

Now screw the cable-clamping nut into place.

The connector can now be removed from the WindSonic.
NOTE: To disassemble the connector, reverse this procedure.

© Gill Instruments Ltd

WindMaster and WindMaster Pro RS422 10 Metre Cable Connections

The WindMaster uses the same range of connector as the WindSonic except for being a 31 way type. Follow the WindSonic connector assembly procedure except for:-

White/Brown wire to Connector Pin 1

Brown/White wire to Connector Pin 2

Green/White wire to Connector Pin 4

Blue/White wire to Connector Pin 5

White/Blue wire to Connector Pin 6

Orange/White wire to Connector Pin 11

White/Orange wire to Connector Pin 12

White/Green wire to Connector Pin 31

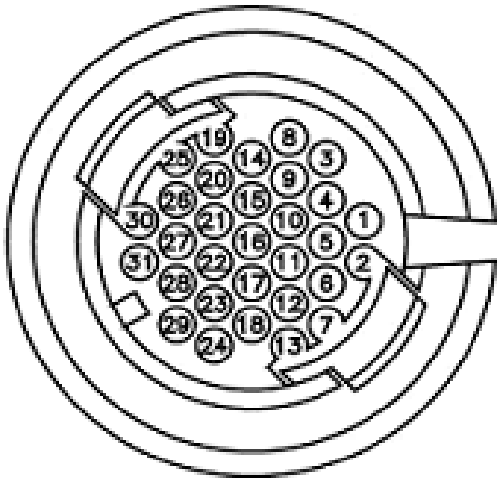

WindMaster 31 way Connector Pin outs

© Gill Instruments Ltd

WindSonic M (Heated) RS422 10 Metre Cable Connections to the Heater Power Interface Box.

Note: See also the lid of the Heater Power Interface Box for Connection Details.

Cut off the contact pins connected to the MetPak Pro Base Station 10 Metre cable, strip and solder wires. Connect wires to the Heater Power Interface box as follows:-

Remote Base Station **10 Metre Cable**	**Heater Power Interface Box** **8 Way Terminal Block**	**WindSonic M (Heated)** **9 Way Connector**
White/Green	8	1
Green/White	7	No Connection
Orange/White	6	2
White/Orange	5	3
Brown/White	4	4
White/Brown	3	5
Blue/White	2	6
White/Blue	1	7
No Connection	No Connection	8
No Connection	No Connection	9

Heater Power Supply	**Heater Power Interface Box** **4 Way Terminal Block**	**WindSonic M (Heated)** **9 Way Connector**
Heater Supply +ve	3	8
Heater Supply -ve	2	9

WindObserver 70 (Enhanced Heated) RS422 10 Metre Cable Connections to the Heater Power Interface Box.

Note: See also the lid of the Heater Power Interface Box for Connection Details.

Cut off the contact pins connected to the MetPak Pro Base Station 10 Metre cable, strip and solder wires. Connect wires to the Heater Power Interface box as follows:-

Remote Base Station **10 Metre Cable**	**Heater Power Interface Box** **8 Way Terminal Block**	**WindObserver 70 (Enhanced Heated)** **19 Way Connector**
White/Green	8 or Screen Terminal Tag	Cable Screen/Drain wires
Green/White	7	M
Orange/White	6	R
White/Orange	5	D
Brown/White	4	P
White/Brown	3	C
Blue/White	2	U
White/Blue	1	V
No Connection	No Connection	A, E and H
No Connection	No Connection	B, F and G

Heater Power Supply	**Heater Power Interface Box** **4 Way Terminal Block**	**WindObserver 70 (Enhanced Heated)** **19 Way Connector**
Heater Supply +ve	3	A, E and H
Heater Supply -ve	2	B, F and G

© Gill Instruments Ltd

Remote Base Communication Cabling

MetPak Pro Base Station has five communication connection options:

- USB (using the 1.8m Gill USB cable, Part No. 1723-10-051).
- RS232
- RS422
- RS485 (two wire point to point).
- SDI-12 (Not with 3 axis WindMaster and WindMaster pro connected)

MetPak Pro Base Station has various Sensor Input connection options:

- 0-5v
- 4-20mA
- PRT.
- Digital Switch
- Gill Wind Sensor via 10 Metre Cable (RS422 connection)

It is important that the cable is appropriate for the chosen connection option. The following sections describe the recommended types and maximum lengths of cable in each case.

NOTE. A 15-metre, 6-pair cable (wires stripped at each end) suitable for RS232/RS422 or SDI-12 communication is available from Gill Instruments (Part No. 1723-10-053).

Cable Type

Wire type: 24AWG

Wire size: 7x32 AWG.

Cable outer diameter: 6-8mm (to match the hub box gland).

For RS422/485 operation the cable should contain twisted pairs screened to match the application.

The following table shows an example manufacturers' reference; other manufacturers' equivalents can be used.

Table 2 Recommended Belden cable types

Application	No. of Pairs	Belden Ref.
SDI-12	2	9729
Digital RS232 or RS485	3	9503
Digital RS422	4	9504
Multiple External Sensors	6	9506

Cable length

The maximum cable length is dependent on the chosen communication method.

The following table shows the maximum cable lengths for the supported communication protocols at the given baud rates, using the recommended cable. If any problems of data corruption etc. are experienced, then a slower baud rate should be used. Alternatively, a higher specification cable can be tried.

© Gill Instruments Ltd

Table 3 Maximum cable lengths for supported communication and sensor network

Communication format	Baud rate	Max. cable length
RS232	19200	6.5M
RS422/485	19200	1000M
SDI-12	1200	90M
0-5v Analogue Input	Not Applicable	Refer to user Analogue Sensor data sheet
4-20mA Analogue Input	Not Applicable	Refer to user Analogue Sensor data sheet
Digital Switch Input	Not Applicable	Switch contact and cable resistance to be less than 1k ohm
PRT Input	Not Applicable	Refer to user PRT data sheet

Cabling (unused wires)

Any unused wires in the connecting cables should be connected to ground preferably at the user equipment end.

Cabling protection

The Cable should be secured:

- With cable clamps or equivalent at regular intervals such that the hub box cable gland does not support the cable weight.
- Away from the mounting bolts to prevent chaffing of the cable.

NOTE. Install appropriate strain relief support to the cable. If possible, pass the cable through the mounting pole.

Earthing

To ensure correct operation and for maximum protection from lightning, a separate lightning rod system is recommended to protect the system.

You can also earth the MetPak Pro Base Station through its mountings or by connecting a grounding cable (minimum of 6mm² copper wire) to a spare MetPak Pro Base Station metalwork bolt hole. Clean off any paint that might prevent a good connection on the installation.

When you connect the communications cable ensure that the screen has a connection to the hub box case.

The Junction Box accessory and Heater Power Interface Box has a plastic case, hence ensure continuity of cable screens into and out of the boxes using the common earthing terminals provided in the boxes.

Routing Cables through the Hub Box Glands

NOTE: The MetPak Pro Base Station Hub Box cable glands contain spring loaded metal leaves that are designed to make a ground contact with cables that have an overall braid screen. Care is therefore required when inserting and removing cables through the glands to prevent damage to the metal leaves.

© Gill Instruments Ltd

2.2.4 Communication and Power Connections

To connect the MetPak Pro Base Station Power and Communications cable:

1. Open MetPak Pro Base Station's hub box by unfastening the four screws.
2. Locate connector J5 (see Figure 3). Carefully pull the connector off its circuit board pins.
3. Strip the cable wires to 8mm.
4. Pass the cable through one of the gland nuts (please refer to the 2nd NOTE on Page 8).
5. Connect your cable as shown in the following diagrams:
   - Gill USB Cable — Figure 5
   - RS232 — Figure 6
   - RS422 — Figure 7
   - RS485 — Figure 8
   - SDI-12 — Figure 9
6. Attach the cable's screen wires to the terminal post (see Figure 3).
7. After connection, securely tighten the gland nut to prevent moisture ingress.

NOTE. Ensure that MetPak Pro Base Station is configured for the chosen communications method

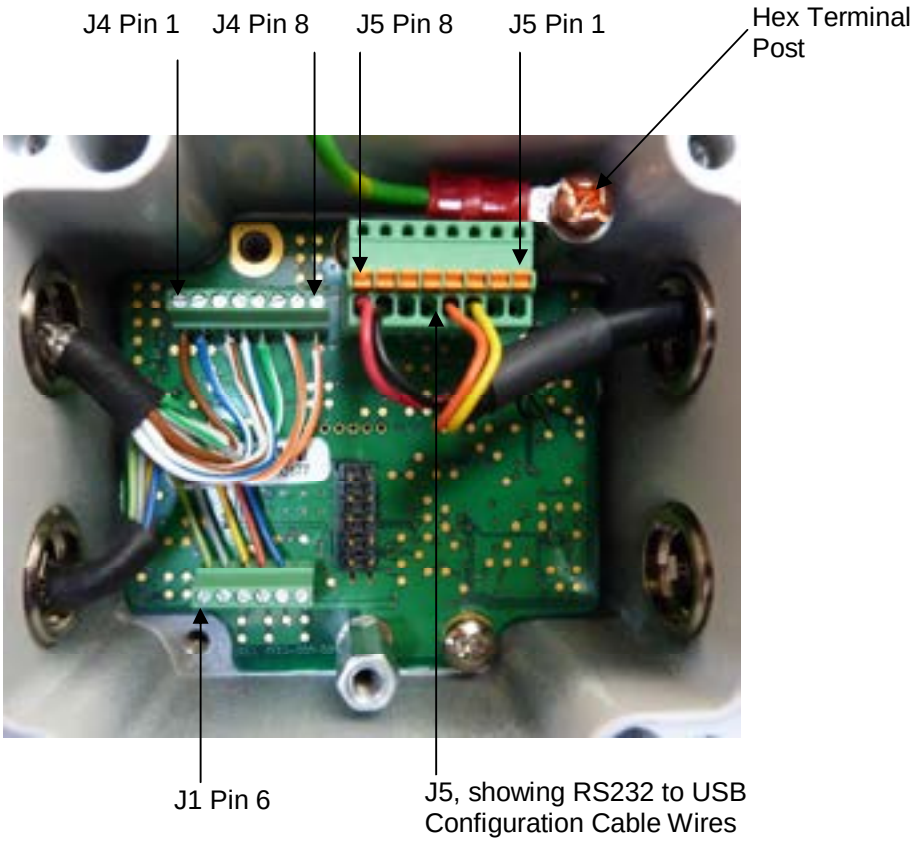

Figure 3 Internal view of the hub box (top circuit board removed).

© Gill Instruments Ltd

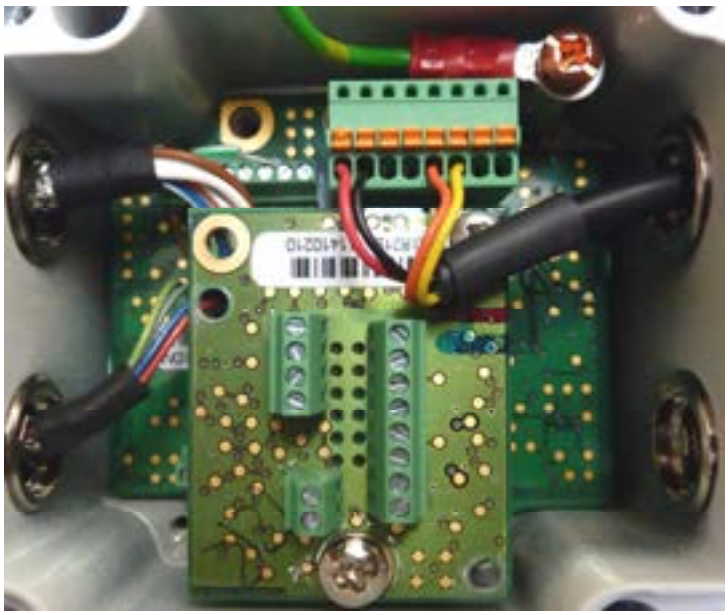

Figure 4 Hub Box with Analogue and Digital Pec fitted.

USB Lead Connection (COMMS set for RS232)

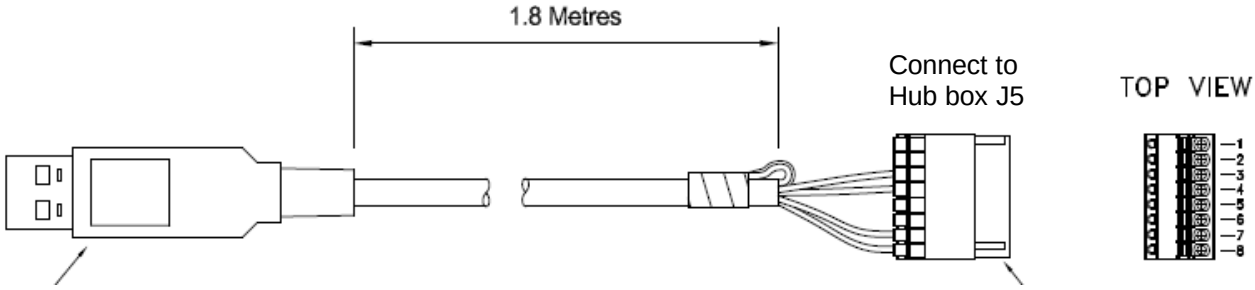

Connect MetPak Pro Base Station to a PC USB port using the Gill Configuration Cable 1723-10-051.

J5 Pin	1	2	3	4	5	6	7	8
Colour	None	None	Yellow	Orange	None	None	Black	Red

Figure 5 Connection of Gill USB Cable (Part No. 1723-10-051)

This USB cable can supply the necessary minimum 5v power for configuring a Base Station hub box and with a WindSonic/WindSonic M unit connected to the 10 Metre cable.

This USB cable can be used to power the Base Station with a WindObserver 70 or WindMaster/WindMaster Pro connected to the 10 Metre cable.

NOTE:- If upon connecting the USB lead to a PC the driver is not found by the PC, then the appropriate driver to match the PC Windows version may be downloaded from:-

http://www.ftdichip.com/Drivers/VCP.htm

NOTE. Ensure that MetPak Pro Base Station 10 Metre cable is terminated before connecting the USB cable as sensor power is connected to the 10 Metre cable pins.

Digital Output RS232 Connections (COMMS set for RS232)

This is the MetPak Pro Base Station default communication configuration setting.

J5 Hub Box 8 Way Push fit Block			PC 9 Way D Type Connector	
Signal names	**Terminal Nos.**	**3 Pair Cable**	**Pin No's**	**Signal Names**
RS232 TX	3	→	2	RXD
RS232 RX	4	←	3	TXD
Signal Ground	2	—	5	Sig Gnd
Chasis Ground	Terminal Post	Screen wires	NA	Chassis Ground
Supply –ve	7	←	–	DC Power
Supply +ve	8	←	+	supply

NOTE. Ensure that MetPak Pro Base Station 10 Metre cable is terminated before connecting dc power as sensor power is connected to the 10 Metre cable

Figure 6 RS232 connections

Digital Output RS422 Connections (COMMS set for RS422)

This is not the default communications setting; ensure the MetPak Pro Base Station has been configured for this output requirement before wiring to a user device.

J5 Hub Box 8 Way Push fit Block			RS422 to RS232 or USB Converter
Signal Names	**Terminal Nos.**	**4 Pair Cable**	**Signal Names**
RS422 TX +	6	→	RX +
RS422 TX –	3	→	RX –
RS422 RX +	5	←	TX +
RS422 RX –	4	←	TX –
Signal Ground	2	—	Signal Ground
Chassis Ground	Terminal Post	Screen wires	Chassis Ground
Supply –ve	7	←	– DC Power Supply
Supply +ve	8	←	+

NOTE. Ensure that MetPak Pro Base Station 10 Metre cable is terminated before connecting the DC power supply as sensor power is connected to the 10 Metre cable.

Figure 7 RS422 connections

Digital Output RS485S 2 Wire Point to Point Connections (COMMS set for RS485P2W)

This is not the default communications setting; ensure the MetPak Pro Base Station has been configured for this output requirement before wiring to a user device.

Note that it is not possible to network other devices on this 2-wire RS485 link unless the unit has been set for Modbus operation and application.

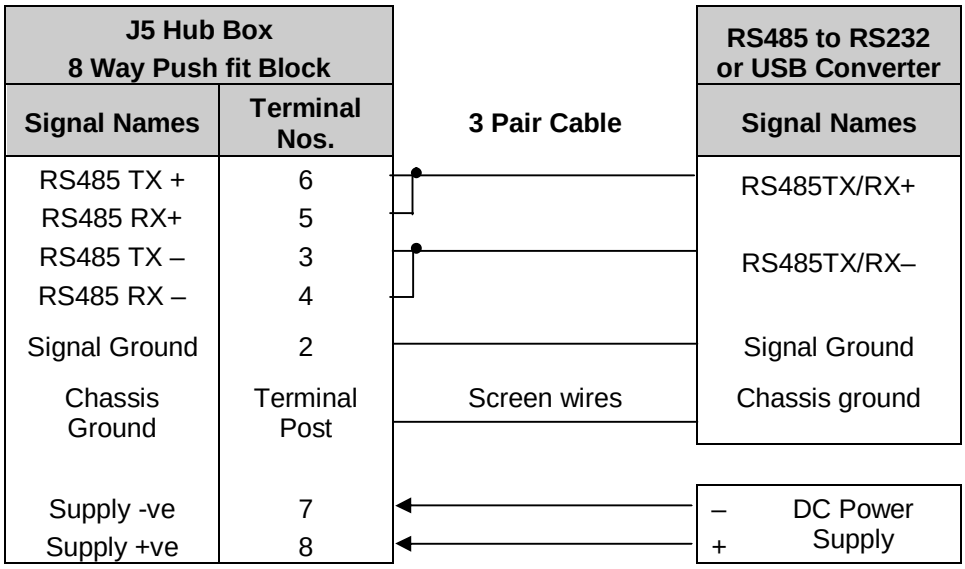

NOTE. Ensure that MetPak Pro Base Station 10 Metre cable is terminated before connecting the DC power supply as sensor power is connected to the 10 Metre cable.

Figure 8 RS485 Connections

Digital Output SDI-12 Connections (COMMS set for SDI12)

This is not the default communications setting; ensure the MetPak Pro Base Station has been configured for this output requirement before wiring to a user device.

(Note SD-12 communications is not applicable with a 3 axis sensor connected to the Base station).

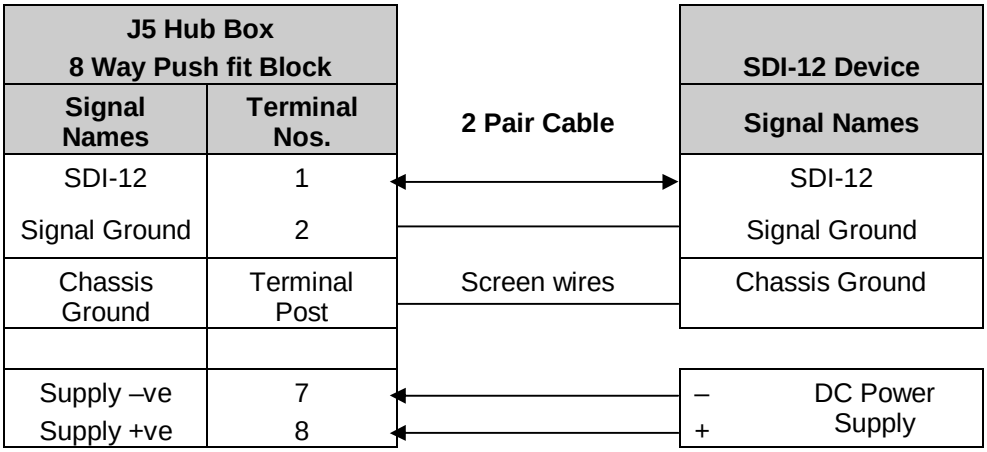

NOTE. Ensure that MetPak Pro Base Station 10 Metre cable is terminated before connecting the DC power supply as sensor power is connected to the 10 Metre cable.

Figure 9 SDI-12 connections

2.2.5 Analogue, Digital and PRT Input Connections

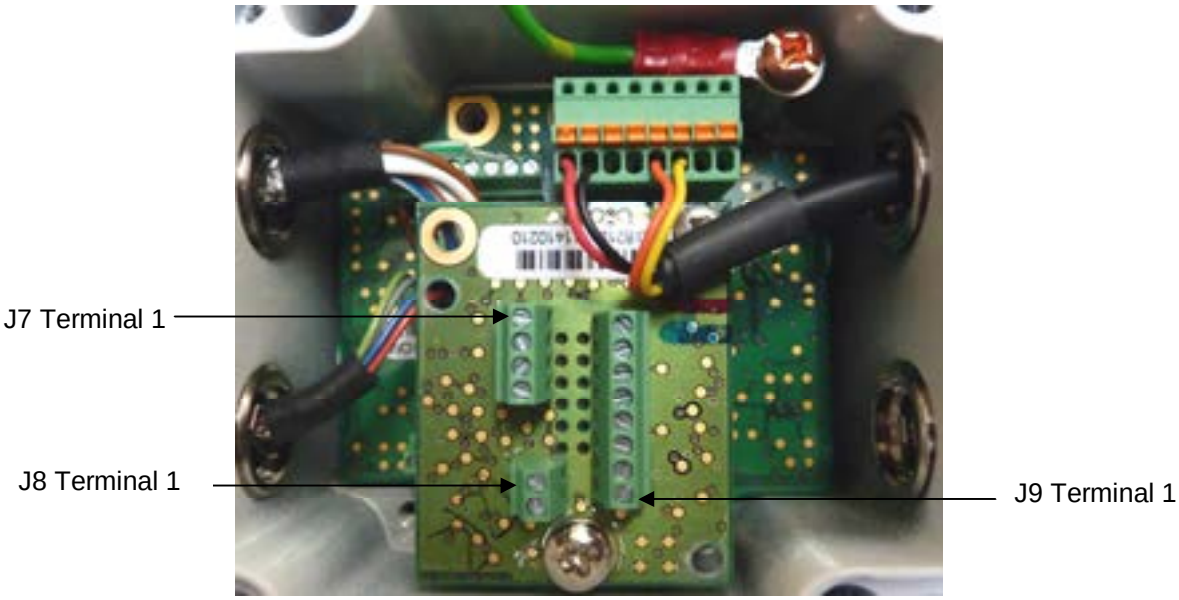

Analogue 0-5 volt Input Connections

This is not a default setting; ensure the MetPak Pro Base Station has been configured for this input requirement before wiring sensors to the MetPak Pro Base Station.

(See Figures 5 to 9 above for Power and Communication Connections).

J9 Hub Box 8 Way Terminal Block		Cable	0-5V Voltage Output Sensors
Signal Names	**Terminal Nos.**		**Signal Names**
VI 1	1	←	Voltage Out 1
GND	2	←	Ground
VI 2	3	←	Voltage Out 2
GND	4	←	Ground
Chassis Ground	Terminal Post	Screen wires ←	Chassis Ground

© Gill Instruments Ltd

Analogue 4-20mA Input Connections (Sensor Powered)

This is not a default setting; ensure the MetPak Pro Base Station has been configured for this input requirement before wiring sensors to the MetPak Pro Base Station.

See Figures 6 to 10 above for Power and Communication Connections).

J9 Hub Box 8 Way Terminal Block			**4-20mA Current Sensors (Sensor Powered)**
Signal Names	**Terminal Nos.**	**Cable**	**Signal Names**
II 1	6	←	Current 1
GND	2	→	Ground
II 2	8	←	Current 2
GND	4	→	Ground
Chassis Ground	Terminal Post	Screen wires	Chassis Ground

Analogue 4-20mA Input Connections (MetPak Pro Base Station Powered)

This is not a default setting; ensure the MetPak Pro Base Station has been configured for this input requirement before wiring sensors to the MetPak Pro Base Station.

See Figures 5 to 9 above for Power and Communication Connections).

J9 Hub Box 8 Way Terminal Block			**4-20mA Current Sensors (MetPak Pro Base Station Powered)**
Signal Names	**Terminal Nos.**	**Cable**	**Signal Names**
II 1	6	←	Current 1
IL Power	5	→	Sensor Power In
II 2	8	←	Current 2
IL Power	7	→	Sensor Power In
Chassis Ground	Terminal Post	Screen wires	Chassis Ground

Digital Switch Connection (Rain Gauge)

This is not a default setting; ensure the MetPak Pro Base Station has been configured for this input requirement before wiring sensors to the MetPak Pro Base Station.

See Figures 5 to 9 above for Power and Communication Connections).

J8 Hub Box 2 Way Terminal Block			Digital Switch e.g. Rain Bucket
Signal Names	**Terminal Nos.**	**Cable**	**Signal Names**
DIG 1	2	←	Switch Contact
GND	1	→	Return Switch Contact
Chassis Ground	Terminal Post	Screen Wire	Chassis Ground

Platinum Resistance Thermometer (PRT) Input

This is not a default setting; ensure the MetPak Pro Base Station has been configured for this input requirement before wiring sensors to the MetPak Pro Base Station.

See Figures 5 to 9 above for Power and Communication Connections).

J7 Hub Box 4 Way Terminal Block			PRT Sensor
Signal Names	**Terminal Nos.**	**Cable**	**Signal Names**
PWR +ve (Power to PRT)	1	→	PRT Excitation +ve
PRT+	2	←	PRT Sense + Output
PRT-	3	←	PRT Sense - Output
GND (PRT Power Ground)	4	→	PRT Excitation -ve
Chassis Ground	Terminal Post	Screen Wire	Chassis Ground

© Gill Instruments Ltd

2.2.6 MetPak Pro Base Station System Connections

Example Non Heated Wind Sensor System

A typical MetPak Pro Base Station system with a non-heated wind sensor system might look like the following illustration.

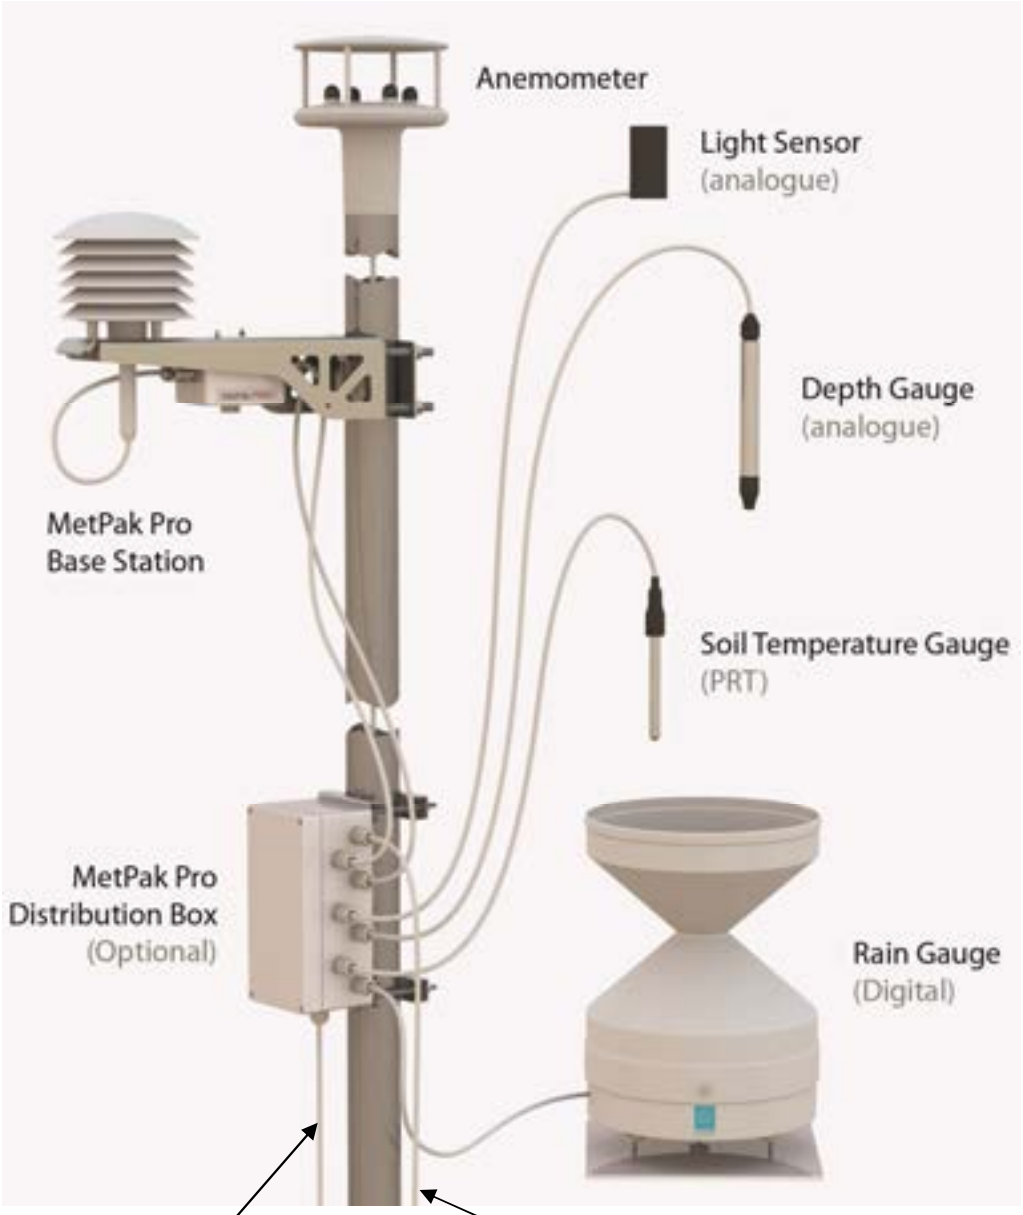

© Gill Instruments Ltd

Example Heated Wind Sensor System

A typical MetPak Pro Base Station system with a heated wind sensor system might look like the following illustration.

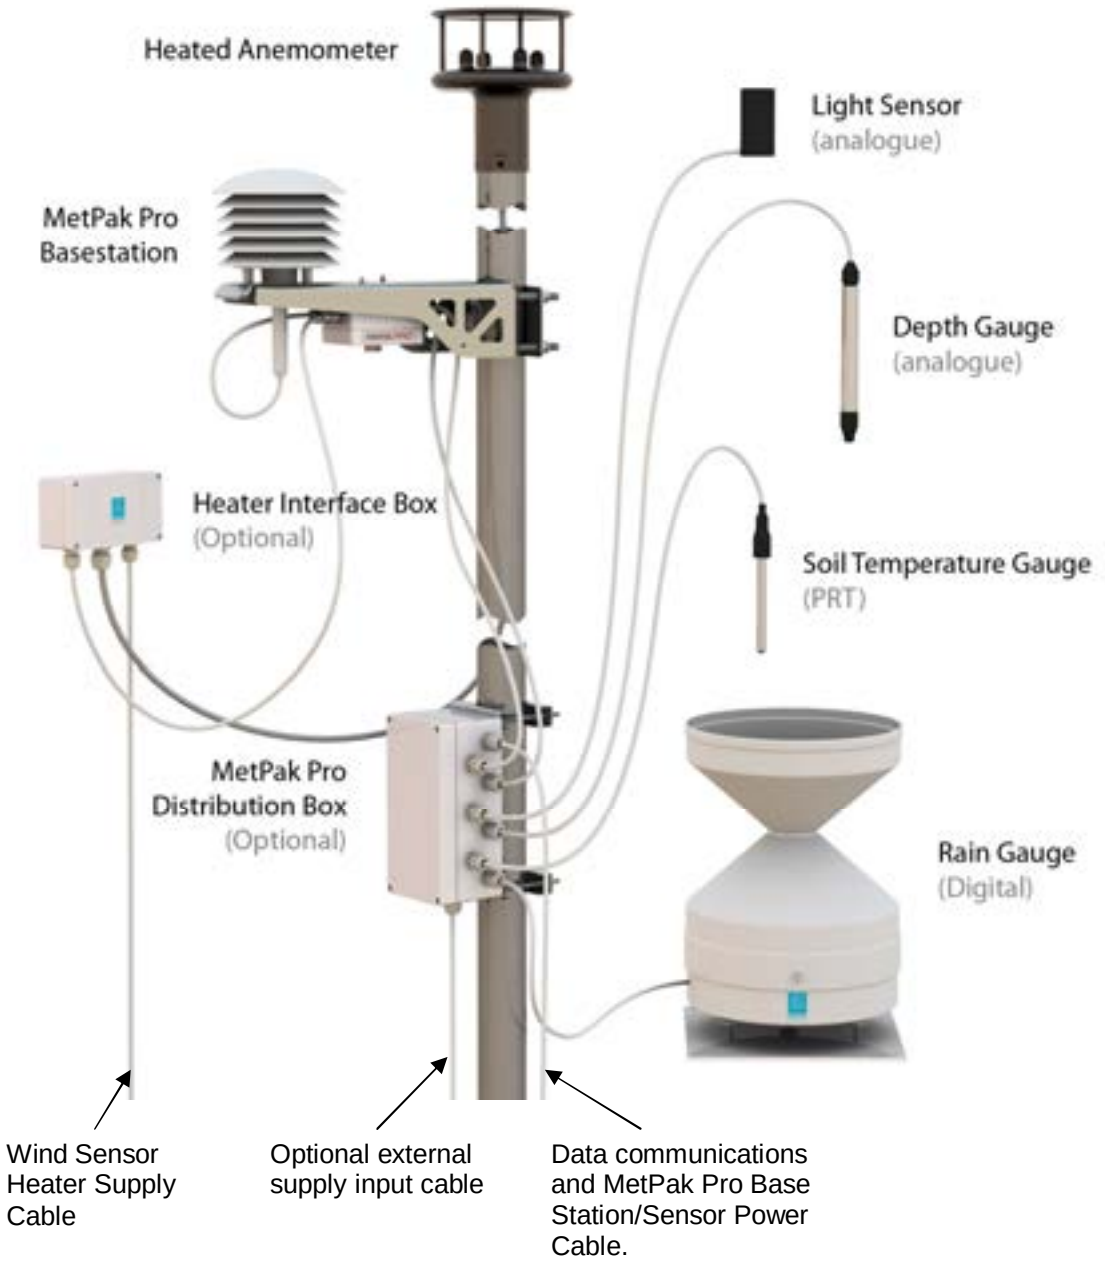

Figure 10 MetPak Pro Base Station Example System Pictures

MetPak Pro Base Station Junction Box Accessory

As part of a MetPak Pro Base Station system Gill Instruments can provide a Junction Box containing a pcb with removable terminal connectors and optional mounting hardware to provide a means of connecting external analogue, PRT and Digital sensors and MetPak Pro Base Station wiring at a convenient common point.

It is not intended that external Wind Sensor wiring be routed through this box.

Alternatively the pcb with removable terminal connectors can be supplied as a standalone item for mounting in a customer supplied box.

Junction Box parts if required are:

1723-PK-201	Junction Box with internal terminating pcb.
1723-PK-202	Terminating pcb (to mount in customer box).
1723-PK-204	Pack of 4 feet for Panel Mounting the Junction Box.
1723-PK-203	Pack of 4 brackets for Pole Mounting the Junction Box.

Junction Box 1723-PK-201 (containing Terminating pcb 1723-PK-202)

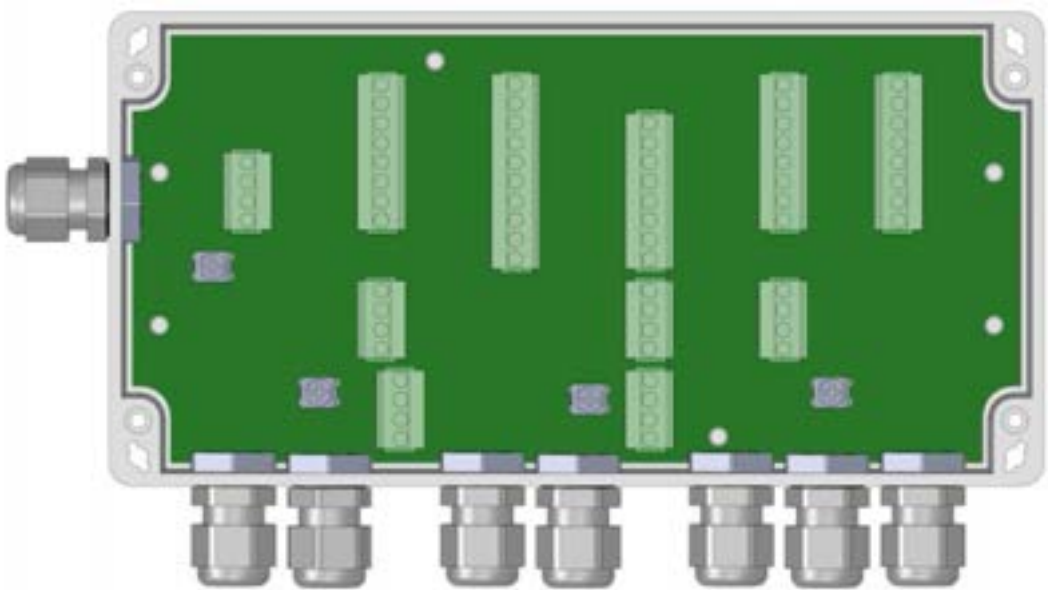

Junction Box terminating pcb circuit track layout

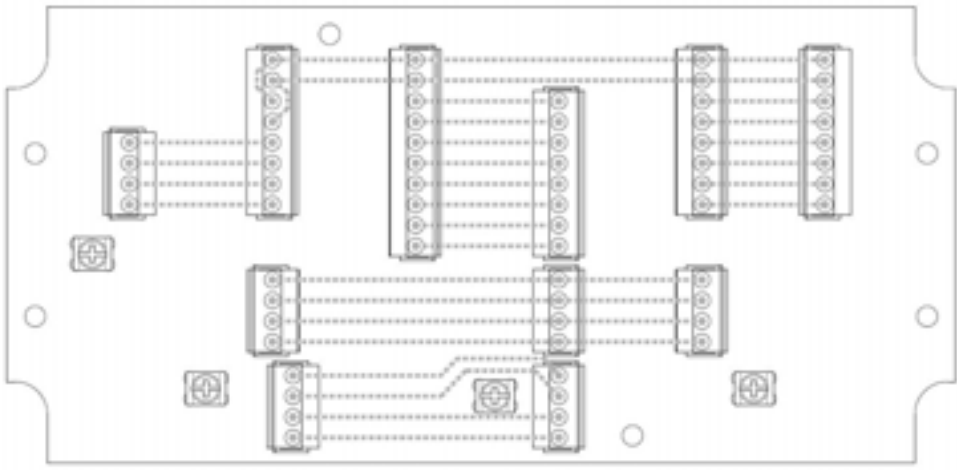

Junction Box Terminal Block Connections

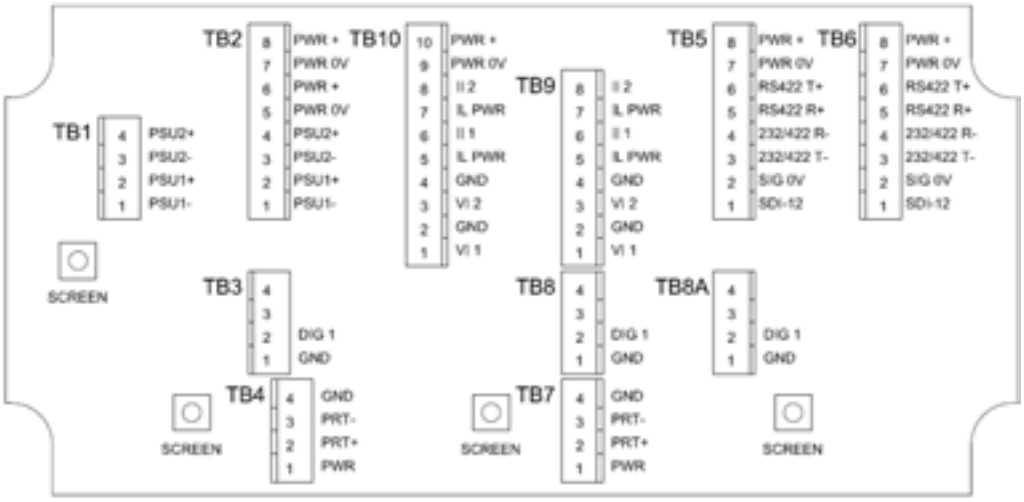

Note that the Junction box glands will accept cables with an outer diameter between 3-10mm. If a smaller diameter cable is to be used bulk out with heat shrink or suitable sleeve to ensure the gland can secure the cable and provide an environmental seal.

Communication System Connections

Only connect cables that meet the required data interface requirement (e.g. RS232 etc.).

MetPak Pro Base Station Hub Box Connector J5		Hub to Junction Box Cable	MetPak Pro Base Station Junction Box TB5	MetPak Pro Base Station Junction Box TB6	Junction Box to User Cable	User PC/Logger Interface
Signal Name	Terminal Number		Signal Name	Signal Name		Signal Name
SDI-12 TX/RX	1		SDI-12	SDI-12		SDI-12
Signal 0v	2		SIG 0v	SIG 0v		SIG 0v
RS232/422/485 TX-	3		232/422 T-	232/422 T-		232/422 R-
RS232/422 RX-	4		232/422 R-	232/422 R-		232/422 T-
RS422 RX+	5		RS422 R+	RS422 R+		422 T+
RS422/485 TX+	6		RS422 T+	RS422 T+		422 R+
Supply 0v	7		PWR 0v	PWR 0v		PWR 0v
Supply +ve	8		PWR +	PWR +		PWR +
Chassis	Terminal Tag	Screen	Screen Tag	Screen Tag	Screen	Screen Tag

© Gill Instruments Ltd

4-20mA Current Sensor System Connections (Sensor Powered)

MetPak Pro Base Station Hub Box Connector J9		Hub to Junction Box Cable	MetPak Pro Base Station Junction Box TB9	MetPak Pro Base Station Junction Box TB10	Junction Box to User Cable	User Current Interface
Signal Name	Terminal Number		Signal Name	Signal Name		Signal Name
II1	6		II1	II1		II1
GND	2		GND	GND		GND
II 2	8		II 2	II 2		II2
GND	4		GND	GND		GND
Chassis	Terminal Tag	Screen	Screen Tag	Screen Tag	Screen	Screen Tag

4-20mA Current Sensor System Connections (MetPak Pro Base Station Powered)

MetPak Pro Base Station Hub Box Connector J9		Hub to Junction Box Cable	MetPak Pro Base Station Junction Box TB9	MetPak Pro Base Station Junction Box TB10	Junction Box to User Cable	User Current Interface
Signal Name	Terminal Number		Signal Name	Signal Name		Signal Name
II1	6		II1	II1		II1
IL PWR	5		IL PWR	IL PWR		IL Power
II 2	8		II 2	II 2		II2
IL PWR	7		IL PWR	IL PWR		IL Power
Chassis	Terminal Tag	Screen	Screen Tag	Screen Tag	Screen	Screen Tag

0-5 Volt Voltage Sensor System Connections

MetPak Pro Base Station Hub Box Connector J9		Hub to Junction Box Cable	MetPak Pro Base Station Junction Box TB9	MetPak Pro Base Station Junction Box TB10	Junction Box to User Cable	User Voltage Interface
Signal Name	Terminal Number		Signal Name	Signal Name		Signal Name
VI 1	1		VI 1	VI 1		V Out 1
GND	2		GND	GND		Ground
VI 2	3		VI 2	VI 2		V Out 2
GND	4		GND	GND		Ground
Chassis	Terminal Tag	Screen	Screen Tag	Screen Tag	Screen	Screen Tag

© Gill Instruments Ltd

Digital Switch Sensor System Connections

MetPak Pro Base Station Hub Box Connector J8		Hub to Junction Box Cable	MetPak Pro Base Station Junction Box TB8 or TB8A	MetPak Pro Base Station Junction Box TB3	Junction Box to User Cable	User Switch Interface
Signal Name	Terminal Number		Signal Name	Signal Name		Signal Name
DIG 1	2		DIG 1	DIG 1		Contact
GND	1		GND	GND		Contact
Chassis	Terminal Tag	Screen	Screen Tag	Screen Tag	Screen	Screen Tag

PRT System Connections

MetPak Pro Base Station Hub Box Connector J7		Hub to Junction Box Cable	MetPak Pro Base Station Junction Box TB7	MetPak Pro Base Station Junction Box TB4	Junction Box to User Cable	User PRT Interface
Signal Name	Terminal Number		Signal Name	Signal Name		Signal Name
PWR+ve	1		PWR+ve	PWR+ve		PRT Excitation +ve
PRT+	2		PRT+	PRT+		PRT Sense + Output
PRT-	3		PRT-	PRT-		PRT Sense - Output
PRT GND	4		GND	GND		PRT Excitation -ve
Chassis	Terminal Tag	Screen	Screen Tag	Screen Tag	Screen	Screen Tag

External Power Supply Connections

User Power Supplies		User to Junction Box Cable	MetPak Pro Base Station Junction Box TB1	MetPak Pro Base Station Junction Box TB2	Cable to Sensors	User Sensor Supplies
Signal Name			Signal Name	Signal Name		Signal Name
PSU1 +ve			PSU1 +ve	PSU1 +ve		PSU1 +ve
PSU1 –ve			PSU1 –ve	PSU1 –ve		PSU1 –ve
PSU2 +ve			PSU2 +ve	PSU2 +ve		PSU2 +ve
PSU2 -ve			PSU2 -ve	PSU2 -ve		PSU2 -ve
Chassis		Screen	Screen Tag	Screen Tag	Screen	Screen Tag

© Gill Instruments Ltd

2.2.7 Mounting MetPak Pro Base Station

MetPak Pro Base Station uses a mounting clamp suitable for attaching to a vertical pipe with a diameter of 30-58mm. When mounting the MetPak Pro Base Station, consider the position, orientation and alignment of the unit.

Note that the mounting pipe should first be degreased and when assembling the MetPak Pro Base Station clamp assembly the outer clamp nuts need to be tightened evenly to a torque figure of 3 Nm.

The moving plate part of the clamp needs to be reversed for poles below 38 mm diameter.

Mounting Bracket Assembly Exploded View

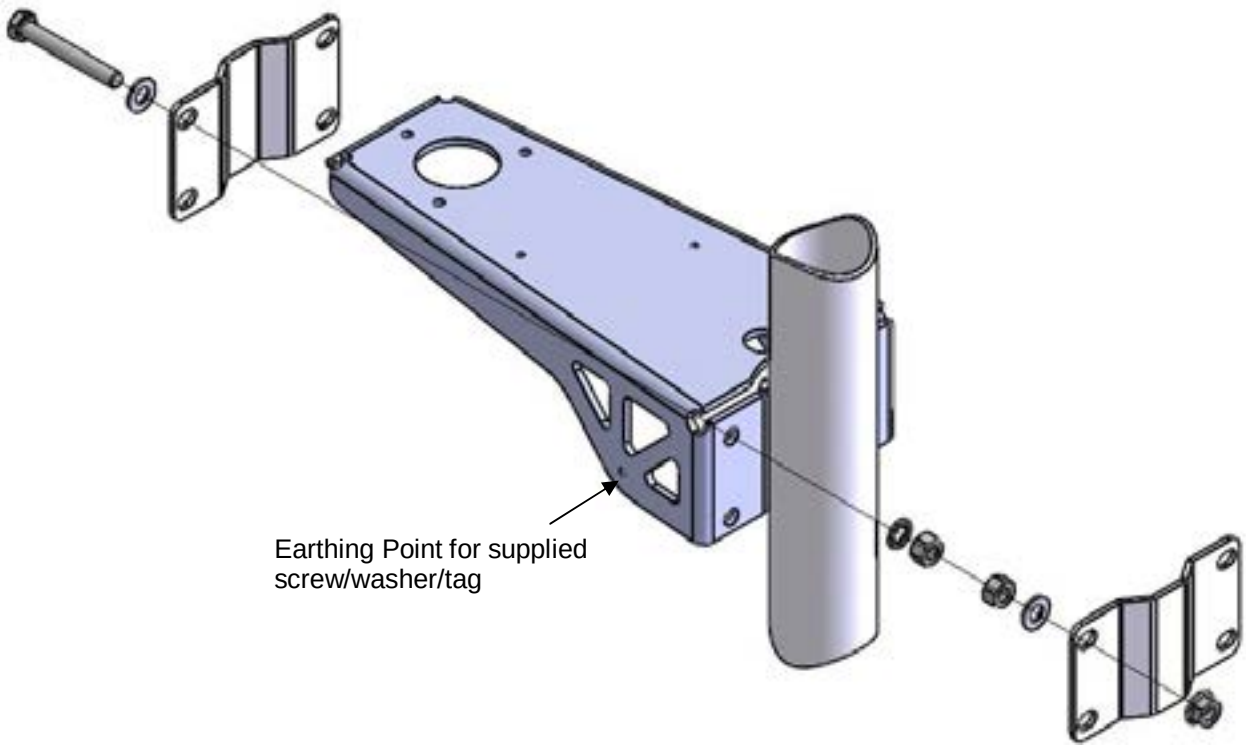

Mounting Bracket Assembled View

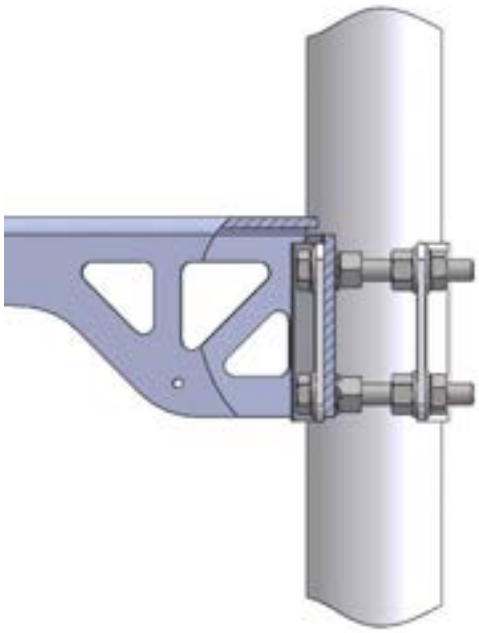

Position

It is the responsibility of the customer to ensure that the MetPak Pro Base Station is mounted in a position clear of any structure, including the mounting post, which may obstruct the airflow or induce turbulence.

Orientation

Normally, the MetPak Pro Base Station is mounted on a vertical pole, ensuring a horizontal Measuring Plane (see Figure 11).
For indoor use the unit may be mounted with the Measurement Plane set to any required orientation.

Alignment

The MetPak Pro Base Station Wind Sensor should be aligned to point to North, or other required reference direction. See the associated Wind Sensor manual for details.

Note. It is usually simpler to work first with a compass at ground level and identify a suitable landmark and its bearing.

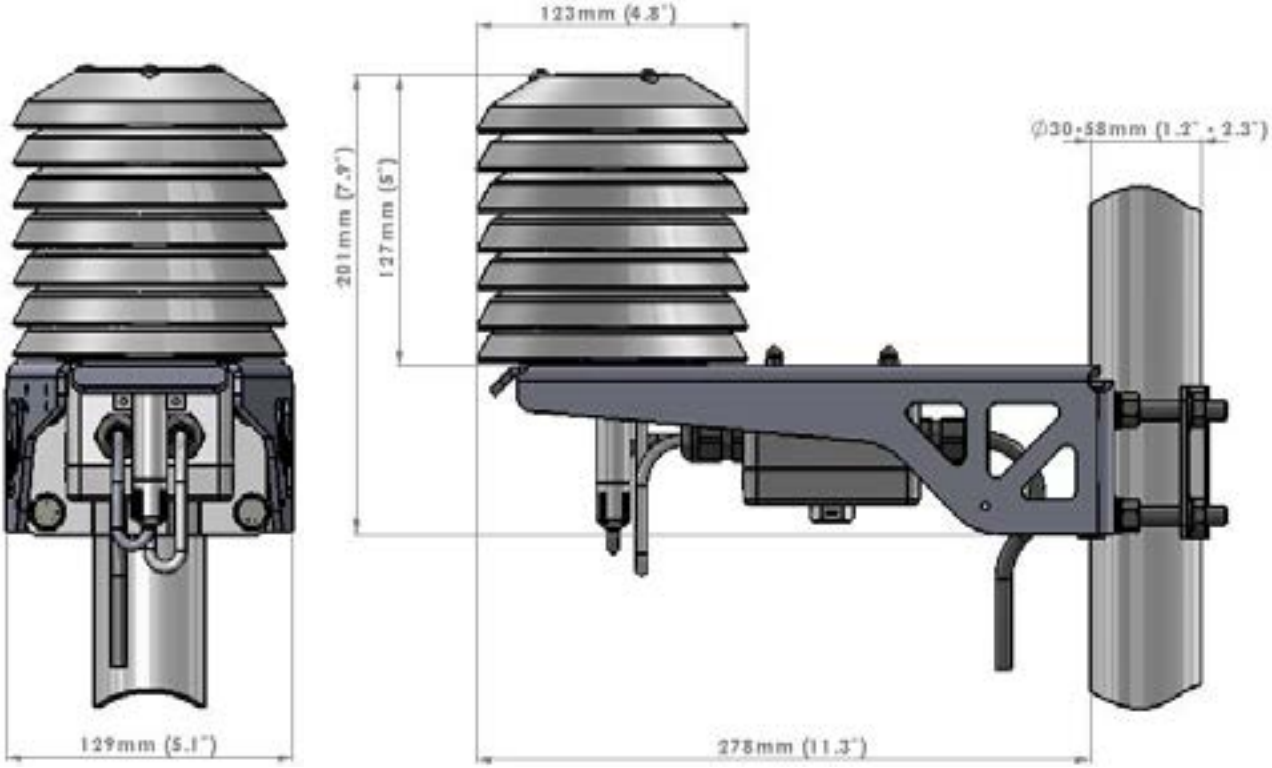

Figure 11 Mounting and Dimensions for MetPak Pro Base Station

Interference

Always check the installation to ensure the MetPak Pro Base Station and Wind sensor is not affected by other equipment operating locally, which may not conform to current standards, e.g. radio/radar transmitters, boat engines, generators etc. See Para 2.1 for guideline details.

CAUTION. Do NOT mount the MetPak Pro Base Station and Wind Sensor in close proximity to high-powered radar or radio transmitters. A site survey may be required if there is any doubt about the strength of external electrical noise.

© Gill Instruments Ltd

2.2.8 Mounting MetPak Pro Base Station Junction Box

The MetPak Pro Base Station Junction Box comes with two mounting arrangement options: -

Junction Box Pole Mount

Using Gill Instruments part 1723-PK-203 Pole Mount brackets set for Junction Box.

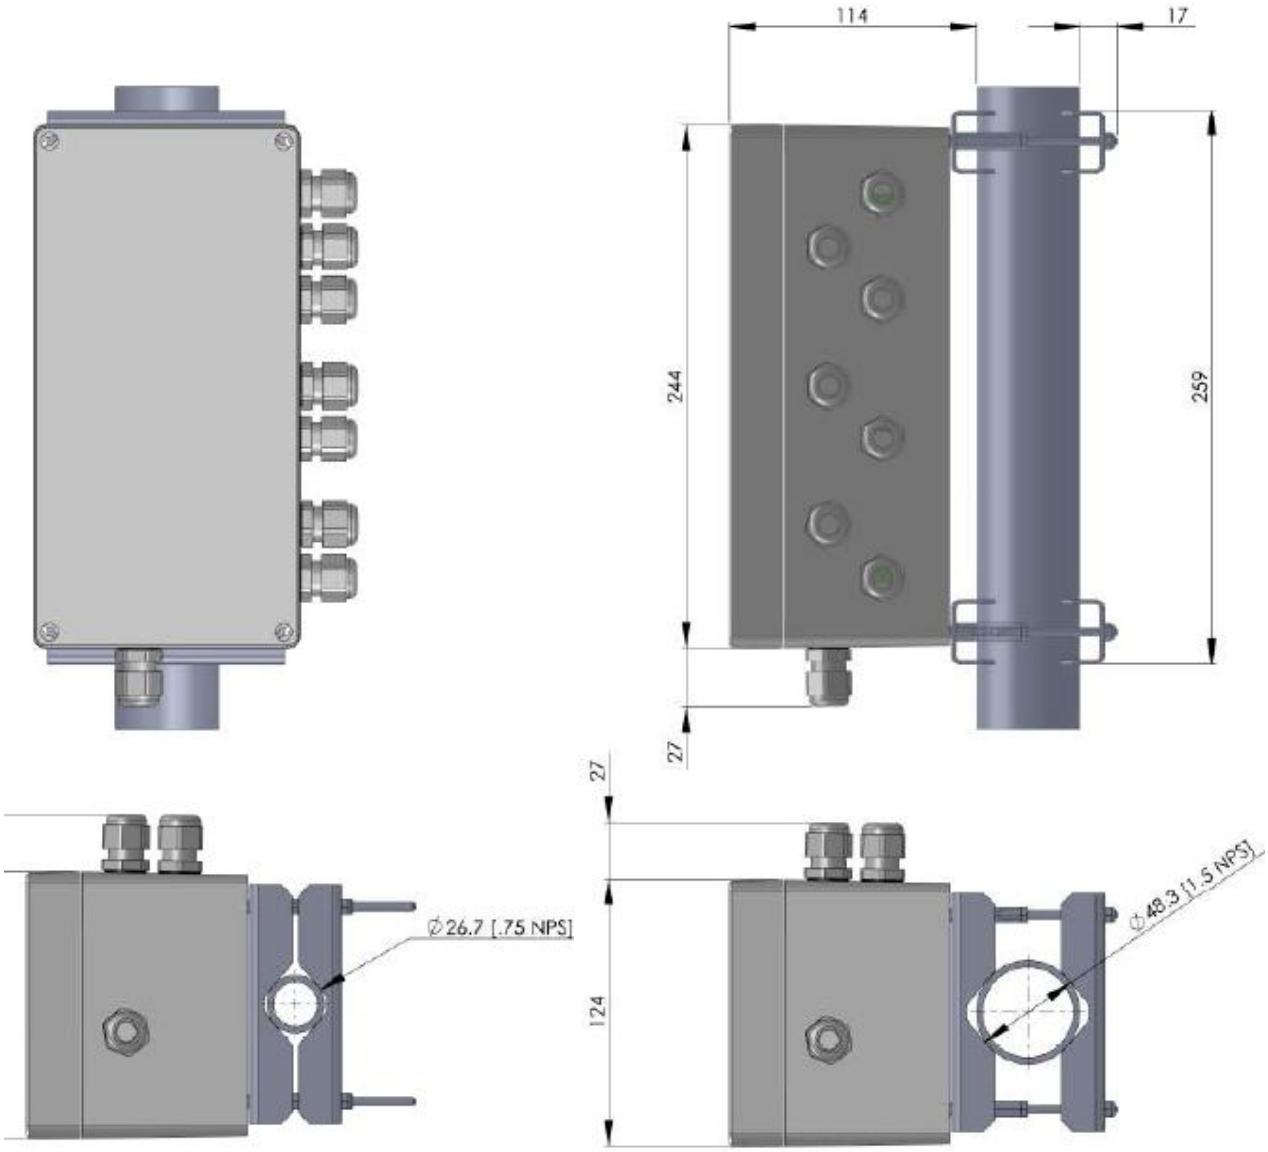

Junction Box Panel or Wall Mount

Using Gill Instruments part 1723-PK-204 Pack of 4 feet for Wall or Panel Mounting the Junction Box.

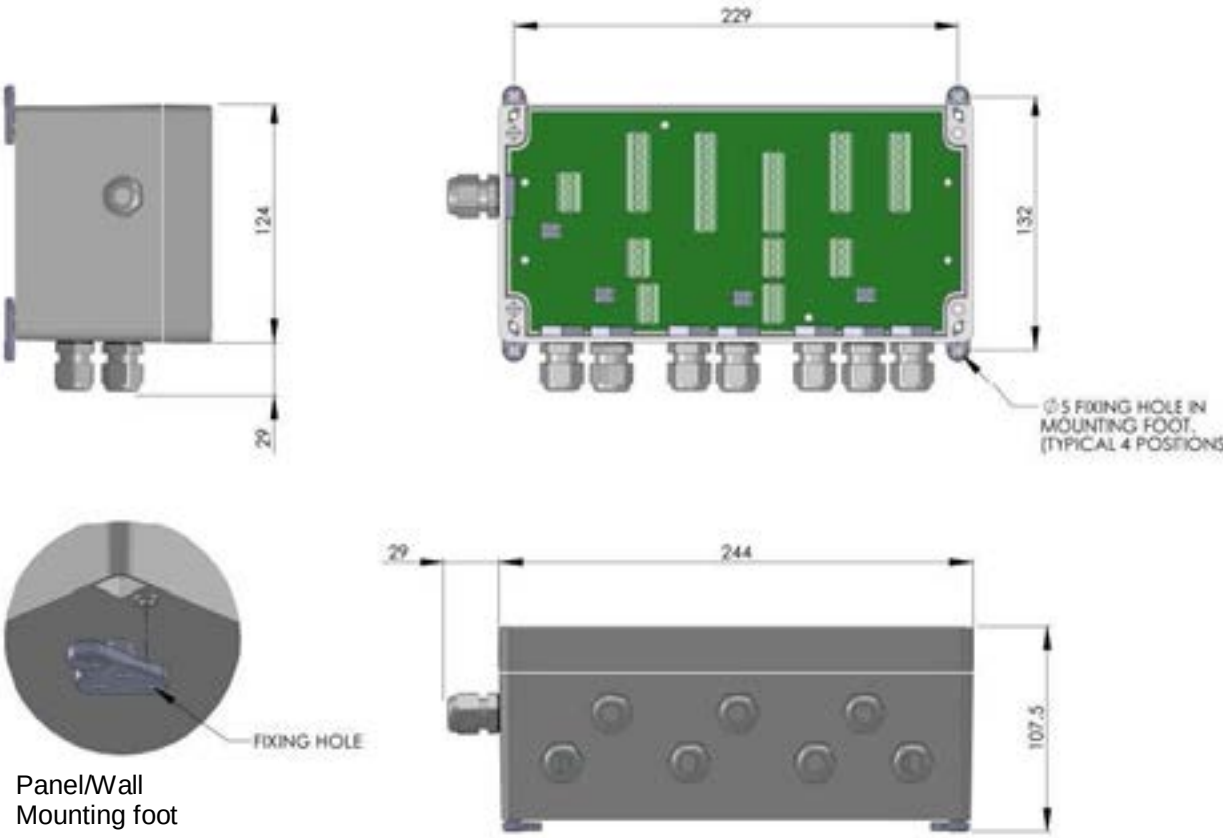

Panel/Wall Mounting foot

2.2.9 Mounting MetPak Pro Base Station Heater Power Interface Box (Optional Item)

This Interface box is included with orders for:-

MetPak Pro Base Station 1723-2A-3-211 (with Heated WindSonic M).

MetPak Pro Base Station 1723-2A-4-311 (with Enhanced Heated WindObserver 70).

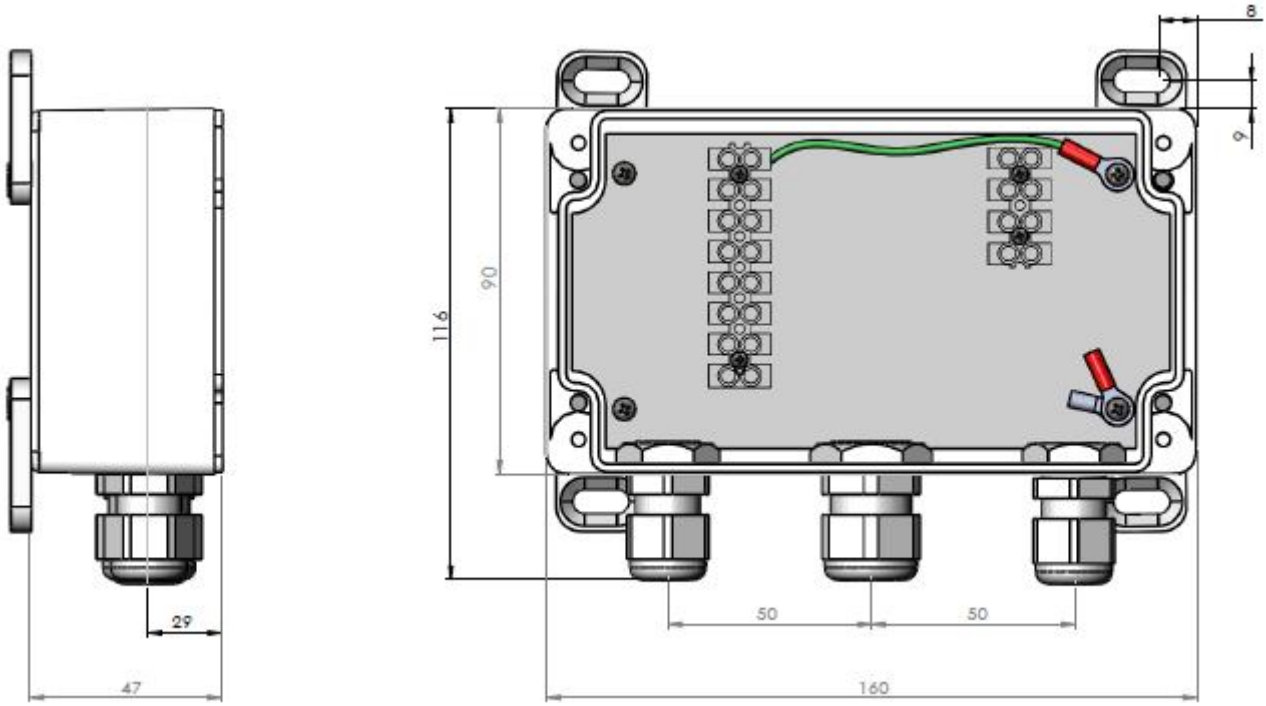

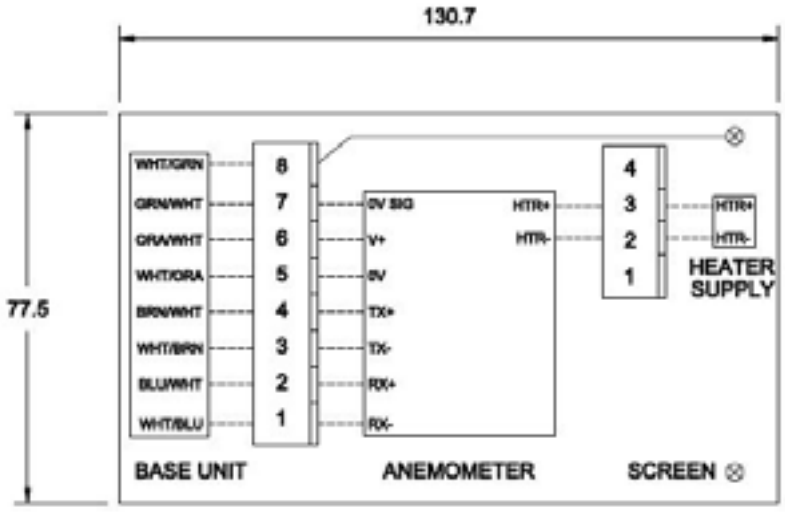

3. Operation

This section provides an overview of the operation of the MetPak Pro Base Station. For more detailed information about any of the steps, use the references to other sections of this manual.

3.1 Start Guide

1. Decide how you are going to connect MetPak Pro Base Station to your PC or communications network. MetPak Pro Base Station supports the following options:

   - USB connection using Gill's RS232 to USB 1.8M configuration cable (includes integral 5V power supply for WindSonic connections only) compatible with MetSet. To order, contact your dealer quoting part number: 1723-10-051).

     NOTE. You could use an equivalent RS232-USB adapter such as EasySynch RS232 to USB adaptor.

   - RS232 connection using standard cable and PC COM port. Separate 12V to 30V dc power supply also required (compatible with MetSet).
   - RS422 using RS232 converter (compatible with MetSet).
   - RS485 2 wire point to point (not compatible with MetSet).
   - SDI-12 connection (note SDI-12 is not compatible with MetSet Software).

     NOTE. MetPak Pro Base Station is pre-configured for RS232 communication (factory setting). If you want to use an alternative communication protocol, you will need to set up the unit using an RS232 connection (with an appropriately wired cable), change the setting, shut the unit down, attach a cable for the new communication type, and then restart the unit.

2. Check that you have the following:

   - MetPak Pro Base Station unit (Part No.1723-2A-X-111).
   - A suitable Gill Wind Sensor (See page 6).
   - Gill MetView and MetSet Software and Manual supplied on the CD.

   If any parts are missing, please contact your dealer.

3. Connect the 10 Metre RS422 cable to the appropriate Wind Sensor connector and Wind Sensor or Heater Power Interface Box and Wind Sensor.
4. Open the Base Station hub box by unfastening the four retaining screws. Locate the connector: J5 (see Page 9, Figure 3). Carefully pull the connector block from its pins.
5. Prepare the communications cable by stripping the wires to a length of 8mm. Feed the prepared cable through one of the two available ports on the side of the connection box (please refer to the 2nd NOTE on Page 8).

© Gill Instruments Ltd

6. Connect the cable to J5 as described on page 10 for your chosen communications method.
7. Carefully press J5 onto its circuit board pins.
8. If connecting Analogue inputs, the Digital Input or a PRT strip cable wires and connect to respective connectors J9, J8 and J7 in the hub box.
9. Tighten the gland on the connection ports to seal the cables in place. Replace the top on the connection box.
10. If you are carrying out a bench test, continue to step 17. When you have finished testing, return to Step 13.
11. Ensure that if you are using a mounting pole that it has been degreased in the area where the MetPak Pro Base Station will be positioned.
12. Position the MetPak Pro Base Station against the mounting post (see page 22), replace the mounting bracket and tighten sufficiently to hold the unit in place but allowing it to be rotated or moved up and down the pole.
13. Install the Wind Sensor in accordance with the appropriate Wind Sensor manual
14. Check the Wind Sensor orientation and alignment of the unit instructed in the Wind sensor Manual.
15. Check the height of the Wind Sensor and MetPak Pro Base Station and ensure that they are clear of any obstructions, including the mounting post that could interfere with their measurements.
16. Tighten the MetPak Pro Base Station mounting bracket nuts evenly to a torque of 3Nm to hold the unit firmly in place.
17. Connect the communications cable to your PC or network device.
18. Connect Analogue, Digital or PRT cables to respective instruments.
19. Place the MetPak Pro Base Station CD in your PC's CD drive and install MetSet and MetView.

© Gill Instruments Ltd

3.2 MetView

MetView Software allows you to view the MetPak Pro Base Station data graphically and has a simple data logging facility.

Before you can use MetView, check that MetPak Pro Base Station is correctly connected to a Serial COM port or USB COM port on your PC.

NOTE: MetView is compatible with RS232 and RS422 connected units only.

MetView will not read SDI-12 or MODBUS data strings.

3.2.1 Opening MetView

Click on the MetView button on your PC's desktop or choose:

Start > Programs > MetView > MetView

The MetView Control Centre window is displayed

Scan Button– If MetPak Pro Base Station transmit and receive wires are connected to the PC then use the Scan button to connect to MetView.

Connection is Receive Only Tick Box – Use if the MetPak Pro Base Station connection to the PC has only transmit wires connected and a MetSet version of its current device settings is available to upload to MetView. Select 'Connection is Receive only' tick box and click on the Scan button. Upload a MetSet generated Device file from a PC location as directed.

Figure 12 Opening MetView Screen

3.2.2 Scanning for Devices

To set up communicate between MetView and a connected MetPak Pro Base Station:

1. Click on the **Scan** button to search the available COM ports for MetPak Pro Base Station devices.

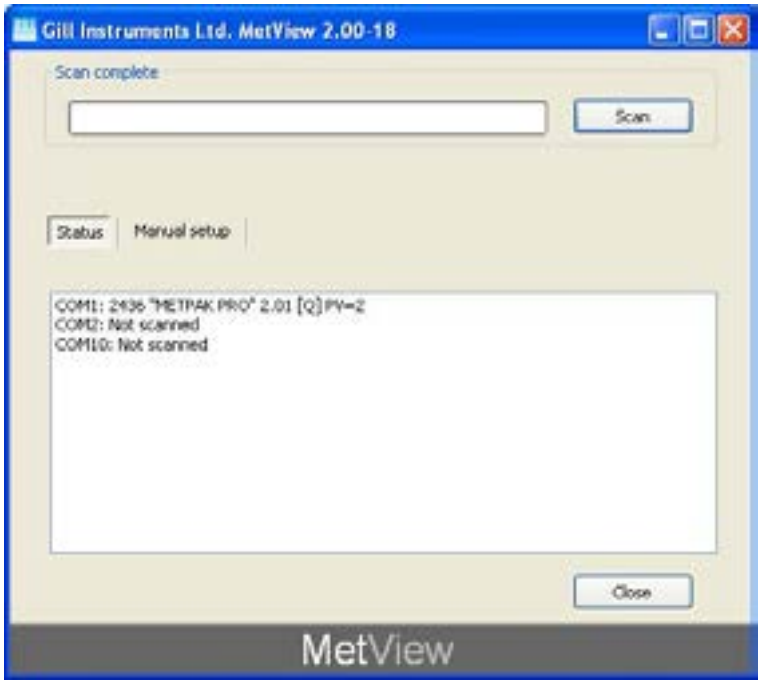

Figure 13 Scanning for MetPak Pro Base Station Devices

When a device is found, MetView obtains the MetPak Pro Base Station configuration settings and then retrieves and displays MetPak Pro Base Station data.

© Gill Instruments Ltd

3.2.3 The MetView Console

When connected correctly, MetView displays its data-monitoring console. This consists of gauges showing: Wind Direction, Wind Speed, Pressure, Humidity, Temperature, PRT, Analogue Input 1 and Analogue Input 2. There are also digital readouts of Dew Point and Digital Input 1. Buttons beneath each of the gauges allow you to choose the displayed units and other options. Each gauge also shows the maximum and minimum values recorded during the current session. The wind speed gauge also shows the maximum gust speed.

Note: MetView will not show data if the unit is set for SDI-12 format.

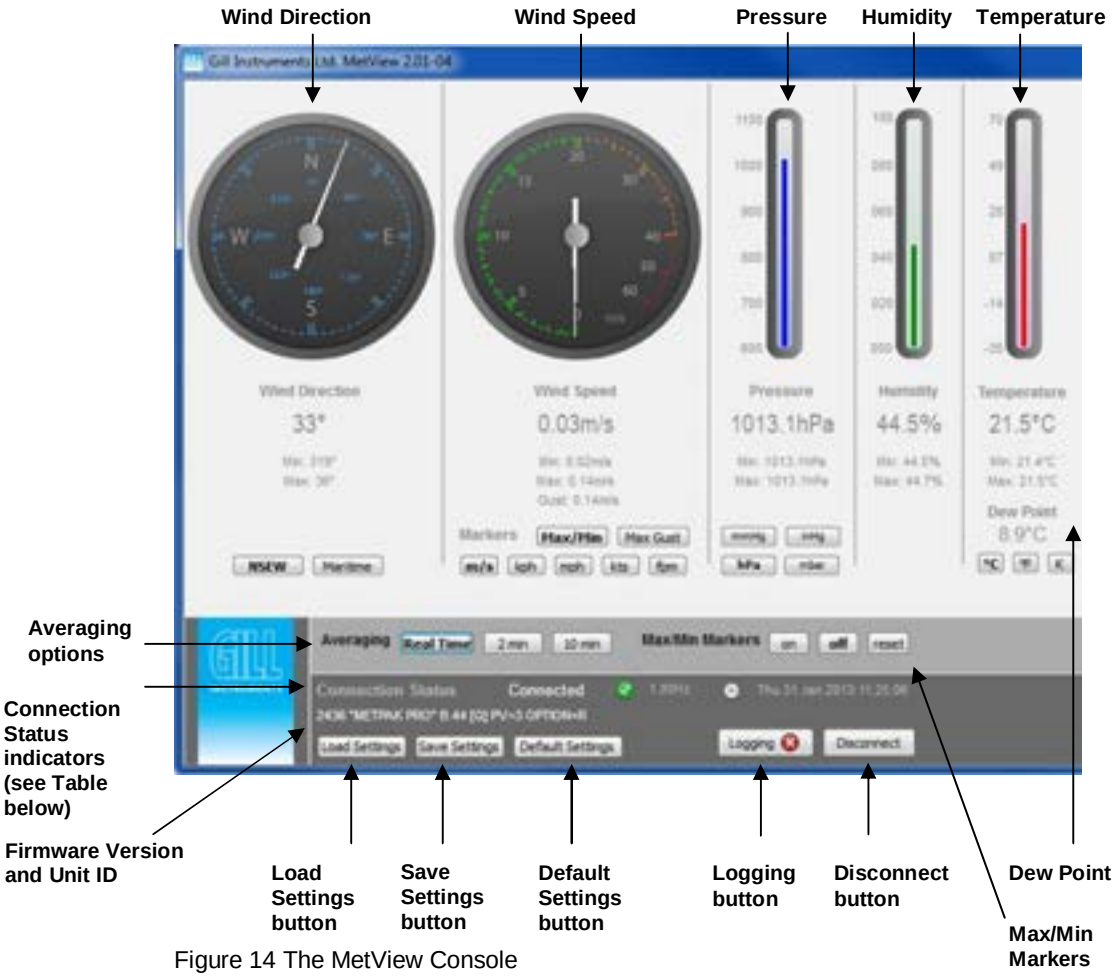

Figure 14 The MetView Console

Connection Status

Table 4 Connection status indicators

Reading	Function
Green Background Tick	Indicates MetPak Pro Base Station logging or communicating correctly with MetView along with reading the MetPak Pro Base Station firmware version.
Red Background Cross	Indicates MetPak Pro Base Station not logging or connected/communicating to MetView.
1.00Hz	Indicates the output rate of the MetPak Pro Base Station when connected. Reads when the unit is communicating correctly with MetView.
Thu 31 Jan 2013 11:25:06	Real Time PC date and time indication.

If the MetPak Pro Base Station has been purchased configured for WindMaster or WindMaster Pro operation MetSet can be used to set the Wind Data output string to read in Polar and W or U, V and W output. When MetView reads the 3 axis Wind data it will either be displayed in Polar and W or U, V and W format as follows:-
Note MetView cannot switch between Polar and U, V and W displays.

3 Axis Polar and W Wind Display

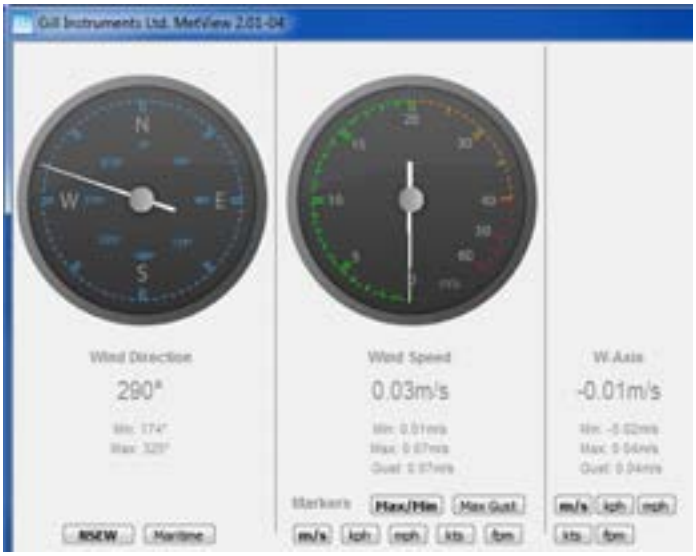

3 Axis U, V and W Wind Display

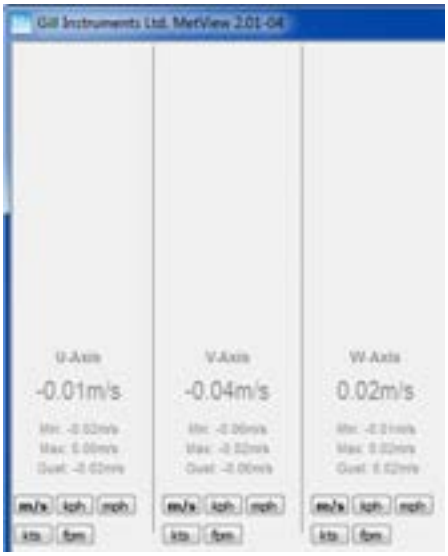

MetPak Pro Base Station User External Sensor Display

PRT, Analogue and Digital inputs are displayed as follow:-

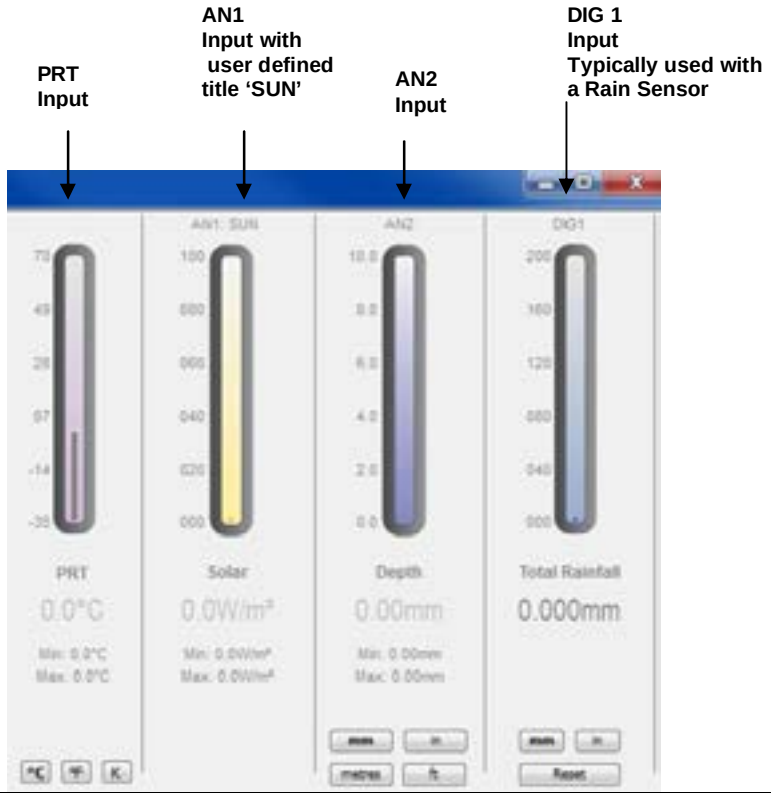

Note. The order in which the instruments are shown in the MetView display reflects the order in which the instrument data appears in the MetPak Pro Base Station data string.

© Gill Instruments Ltd

3.2.4 MetView Console Display Options

MetView Console buttons can convert data from the MetPak Pro Base Station to read different units or scale settings. This does not alter the actual MetPak Pro Base Station configuration.

Units shown in **bold** denote default settings

Table 5 MetView scale and unit options

Gauge	Function
Wind Direction	Use buttons to choose from two display styles: **NSEW** or Maritime
Wind Speed Markers	Use buttons to add markers on the gauge for **Max/Min** or Max Gust.
Wind Speed	Use buttons to choose from five wind speed units: **m/s**, kph, mph, kts, fpm
Pressure	Use buttons to choose from pressure scales: **hPa**, mbar, inHg, mmHg
Humidity	Displays Max and Min values during current session in **%**
Temperature & Dew Point	Use buttons to choose from three temperature scales: **°C**, °F, K
PRT	Use buttons to choose from three temperature scales: **°C**, °F, K
AN1	Buttons displayed will depend on Analogue input type selected.
AN2	Buttons displayed will depend on Analogue input type selected.
DIG1	Typically for Rain, reads total rainfall since connected, buttons available for inches or millimetres and a reset button.

Table 6 MetView averaging options

Setting	Function
Real Time	Choose this button for no averaging
2 Min	Select for 2 minute rolling average of all sensor readings except DIG1
10Min	Select for 10 minute rolling average of all sensor readings except DIG1

Table 7 Max/min markers

Setting	Function
Off	Maximum and Minimum Markers on all gauges turned off
On	Maximum and Minimum Markers on all gauges turned on
Reset	Reset all Gauge Maximum/Minimum Markers and all digital Maximum/Minimum reading at will

Table 8 MetView Screen Settings Options

Setting	Function
Save Settings	Will Save all the current MetView screen settings to a file for later retrieval if required.
Load Settings	Will load and update the MetView screen with a previously saved setting.
Default Settings	Will return all MetView screen settings to factory default.

3.2.5 MetView Gauge Ranges and Graphs

Gauge Range Settings.

MetView Pressure, Humidity, Temperature, PRT, AN1, AN2 and DIG1 Gauge ranges may be altered to view changes in conditions more visibly.

Note, these changes only affect MetView settings and do not affect the MetPak Pro Base Station output.

For instance if the typical temperature measurement range required is from +10 degrees to +40 deg C then the temperature gauge range can be adjusted to reflect this.

Place the mouse pointer over the Temperature display gauge and double click to bring up the Set Gauge Range screen. Change Max and Min readings to required values, e.g. +10 min and +40 max.

Click on Set.

The Temperature gauge range will be updated to reflect the change.

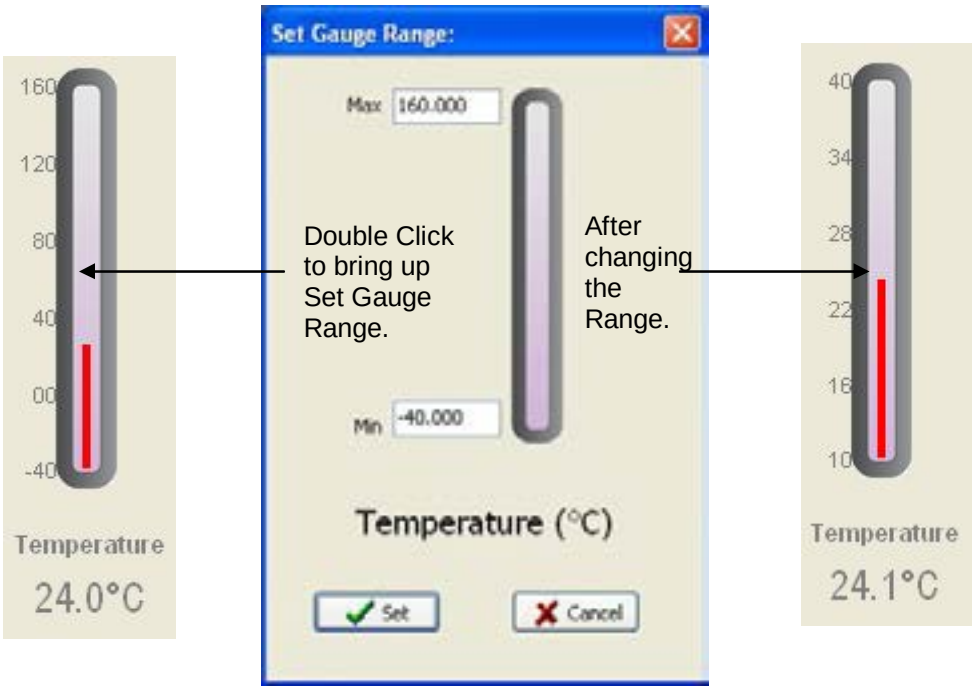

Figure 15 MetView Gauge Range

© Gill Instruments Ltd

Graphs

MetView allows data detected over the last minute, last 1 hour and last 24 hours to be accessed and shown on a graph.

Note. Data is only shown up to the time when the graph function is selected; the graph is not updated once opened. Data is collected from the time that MetView is opened and reading data from a MetPak Pro Base Station.

Double Click on the reading to bring up the graph.

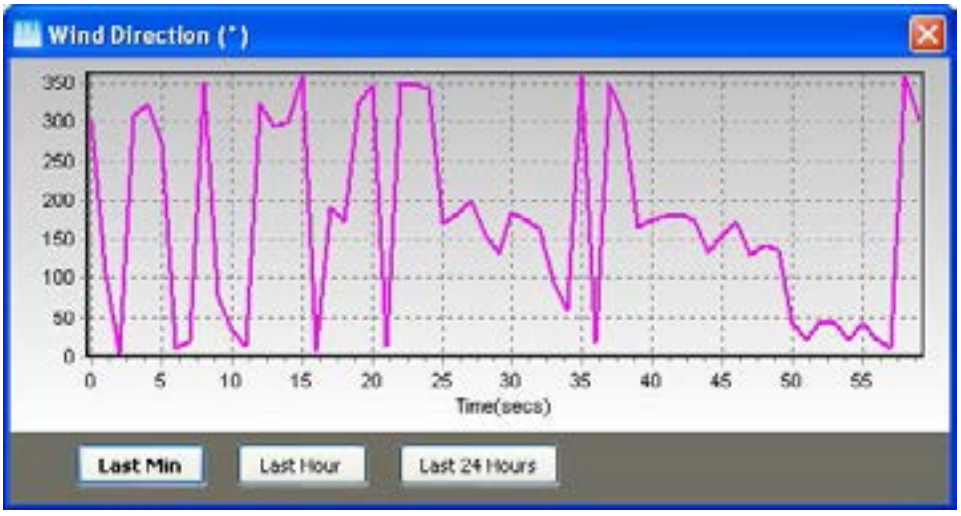

Click on the Last Min, Last Hour or Last 24 Hours buttons as required to view data.

Figure 16 MetView Graph

3.2.6 Data logging

NOTE. MetView logs data based on the MetPak Pro Base Station configuration not on the MetView console settings.

To log MetPak Pro Base Station data, click on the **Logging** button on the MetView console. The *Logging* dialog box is displayed.

Figure 17 Setting up data logging

Setting up a logging file

1. Select **Enable Logging** to start logging to a file.
2. Identify the name and location for the logging file:

   Log File location Click on the **Browse** button to identify the folder where you want to store the data file. Enter the name of the file.

   Log file header if required type some notes on the data that is to be recorded which will appear at the top of the saved data log file.

3. Choose from the following additional options:

   Log File Rotation Set up segmented logging with each logged file length determined by the number entered in the text box below. The figure 3600, for example, means that each log file length will be 3600 lines of data. Maximum entries per log file is limited to 65535 and a maximum of 2048 log files can be created.

   Add Timestamp Adds the date and time to the logged data file taken from the PC clock.

© Gill Instruments Ltd

To start logging

1. Check that the **Enable Logging** option is selected.
2. Click on the **OK** button to commence logging and return to the console.

Note. To show that data is being recorded, the Logging button's icon changes to a green tick:

Logging active

Logging stopped

To stop logging

To turn off logging:

1. Click on the **Logging** button on the MetView console. Clear the **Enable Logging** check box.
2. Click on the **OK** button. If logging has stopped, the Logging button shows a red background cross instead of the green background tick (see above).

© Gill Instruments Ltd

Understanding Logged Data

Logged data is stored to a file with a **.log** extension. This can be viewed in any text/HTML editor or spreadsheet application.

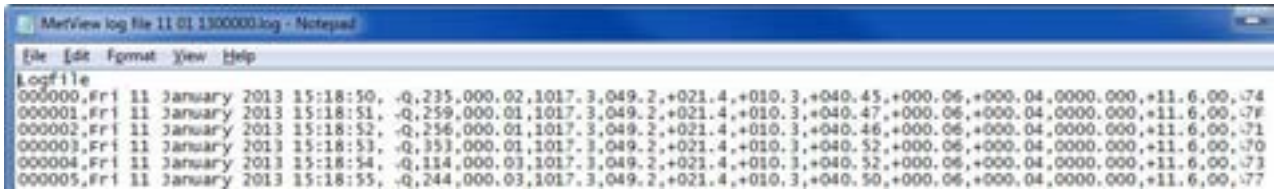

Figure 19 A typical 2 Axis data log (viewed in Windows Notepad)

Each entry in the default reporting order consists of the following (2 axis data illustrated):

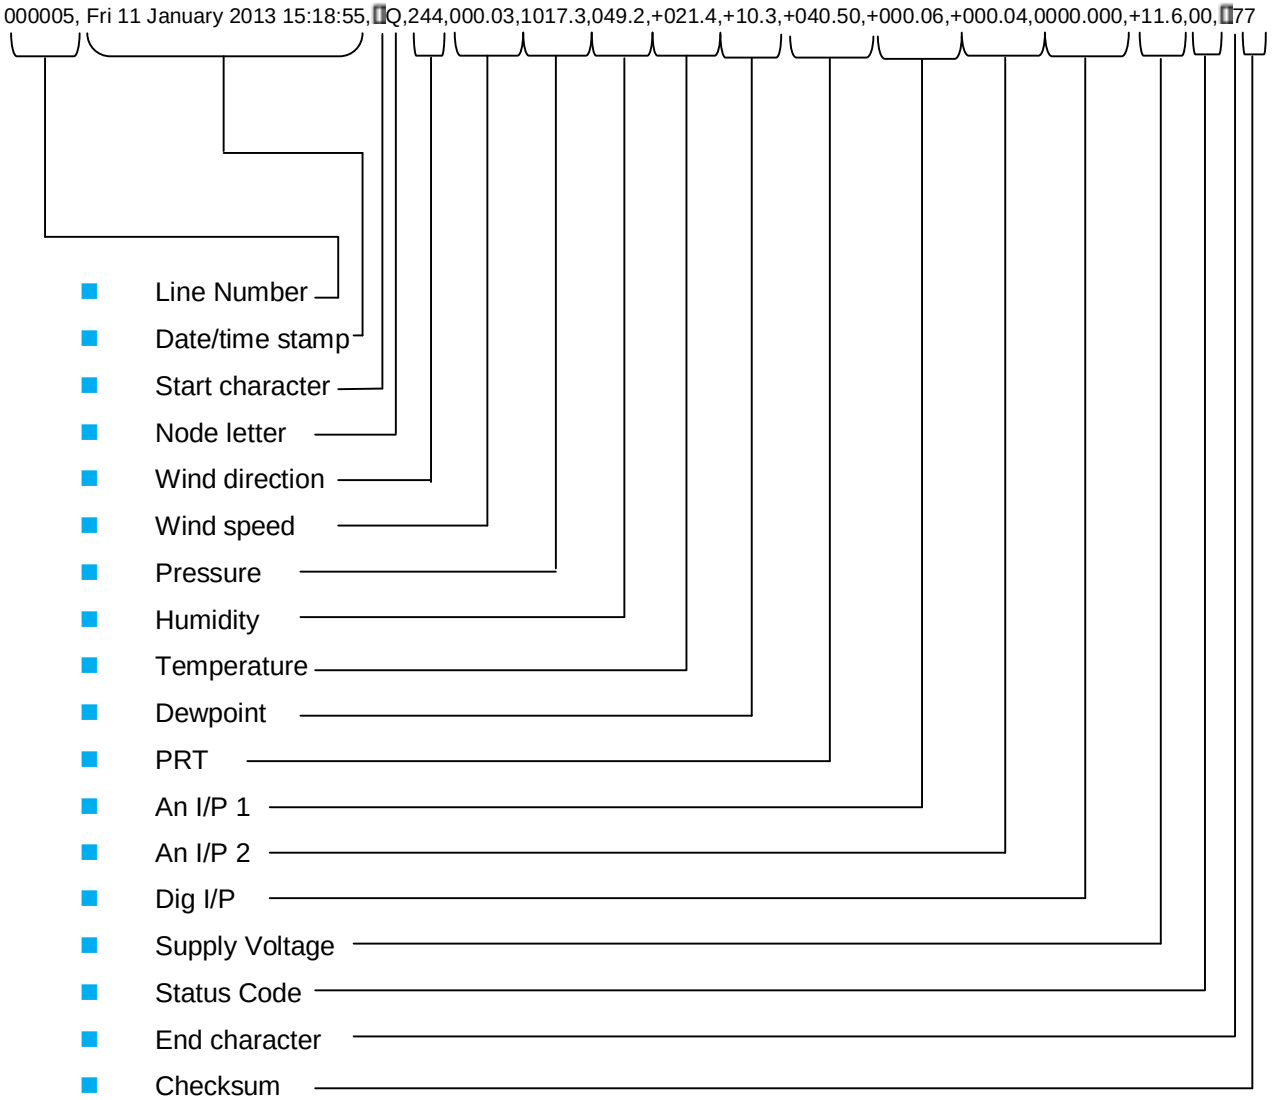

3.3 MetPak Pro Base Station Configuration

MetPak Pro Base Station can be configured using Gill MetSet software.

The default configuration settings are listed in the following table.

Table 9 Default configuration settings

Setting	Function
Comms Levels	RS232
Baud Rate	19200
Data Connection	Data Bits 8, Parity None, Stop Bits 1, Flow Control None.
Node ID	Q
Output rate	1Hz
Message Mode	Continuous
ASCII Set Up	Carriage return and line feed, Echo on
North Alignment	0
Sensor WindSpeed	On
Wind Speed Units	MS (Metres/Second)
Temperature Sensor	On
Temperature Units	C (Degrees Celsius)
Dewpoint Sensor	On
Dewpoint Units	C (Degrees Celsius)
Pressure Sensor	On
Pressure Units	Hecto Pascals
Humidity Sensor	On
Humidity Units	%
Report Format	Node, Polar (Wind Direction and Wind Speed), Pressure, Humidity, Temperature, Dewpoint, PRT, AN1, AN2, DIG1, Volts, Status, Checksum.
Status Message Output	On
Report Message Output	On
Units Message Output	On
Inputs Message Output	On
PRT Sensor	On
PRT Units	C (Degrees Celsius)
AN1 Sensor Type	Not Configured
AN1 Units	#
AN1 Analogue Input Type	Not Configured
AN1 Substitute Name	-
AN2 Sensor Type	Not Configured
AN2 Units	#
AN2 Analogue Input Type	Not Configured
AN2 Substitute Name	-
DIG1 Sensor Type	Not Configured
DIG1 Units	#
DIG1 Digital Count	Not Configured
DIG1 Substitute Name	-
Output Sentence	Comma Separated Variable

© Gill Instruments Ltd

Example Default 2 Axis Data String:

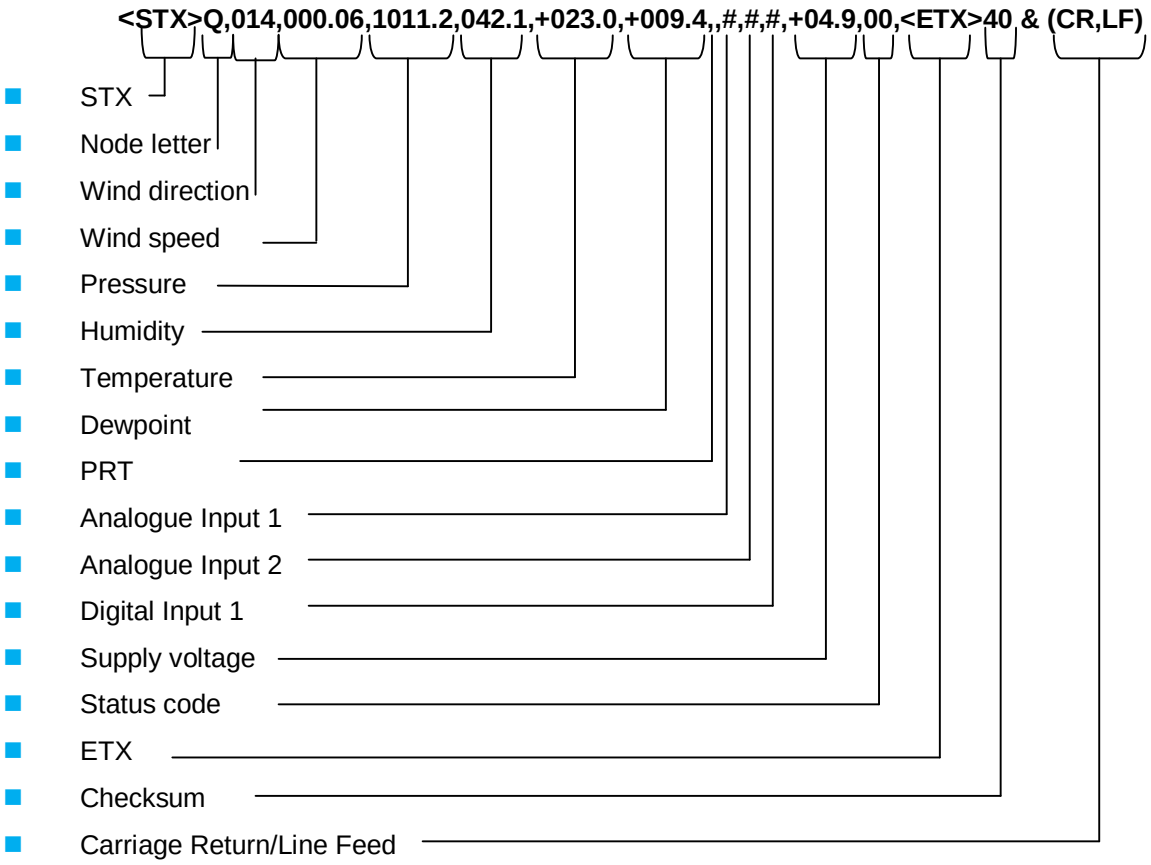

NOTES:

<STX> is the Start of String character (ASCII value 2).

,, is the default output for PRT until configured by MetSet.

is the default output for Analogue Inputs 1 & 2 and Digital Input 1 until configured by MetSet.

<ETX> is the End of String character (ASCII value 3).

Checksum, the 2 digit Hex Checksum sum figure is calculated from the Exclusive OR of the bytes between (and not including) the STX and ETX characters.

Example MetPak Pro Base Station Data String all Sensors Configured:

With 2 Axis wind sensor

┐ Q,249,000.01,1017.3,049.2,+021.4,+010.3,+040.45,+000.06,+000.04,0000.000,+11.6,00,└ 7C

With 3 Axis wind Sensor

MetSet is used to set 3 axis wind readings for Wind Direction and Speed (Polar) and W readings.

┐ Q,249,000.03,+000.02,1013.5,042.9,+022.0,+008.8,+040.45,+000.06,+000.04,0000.000,+11.6,00,└ 50

MetSet is used to set 3 axis wind readings for U, V and W readings.

┐ Q,+000.01,-000.02,+000.00,1013.4,043.0,+022.1,+009.0,+040.45,+000.06,+000.04,0000.000,+11.6,00,└ 74

NOTE. Switch on Time. Upon switching on the MetPak Pro Base Station, allow 9.5 seconds to elapse before data is output. If powering Wind Sensors separately then take individual sensor start up times into consideration.

© Gill Instruments Ltd

3.4 Configuring MetPak Pro Base Station with MetSet

Before you use MetSet check that MetPak Pro Base Station is correctly connected to a Serial COM port or USB COM port on your PC.

NOTE: MetSet is compatible with RS232 and RS422 connected units only.

3.4.1 Opening MetSet

Click on the MetSet button on your PC's desktop or choose:

Start > All Programs > MetSet > MetSet

The MetSet Control Centre window is displayed. If you have more than one MetPak Pro Base Station connected to your PC, MetSet, by default, selects the first device detected.

For most applications it is recommended to click on the MetSet **Connect and Read** button.

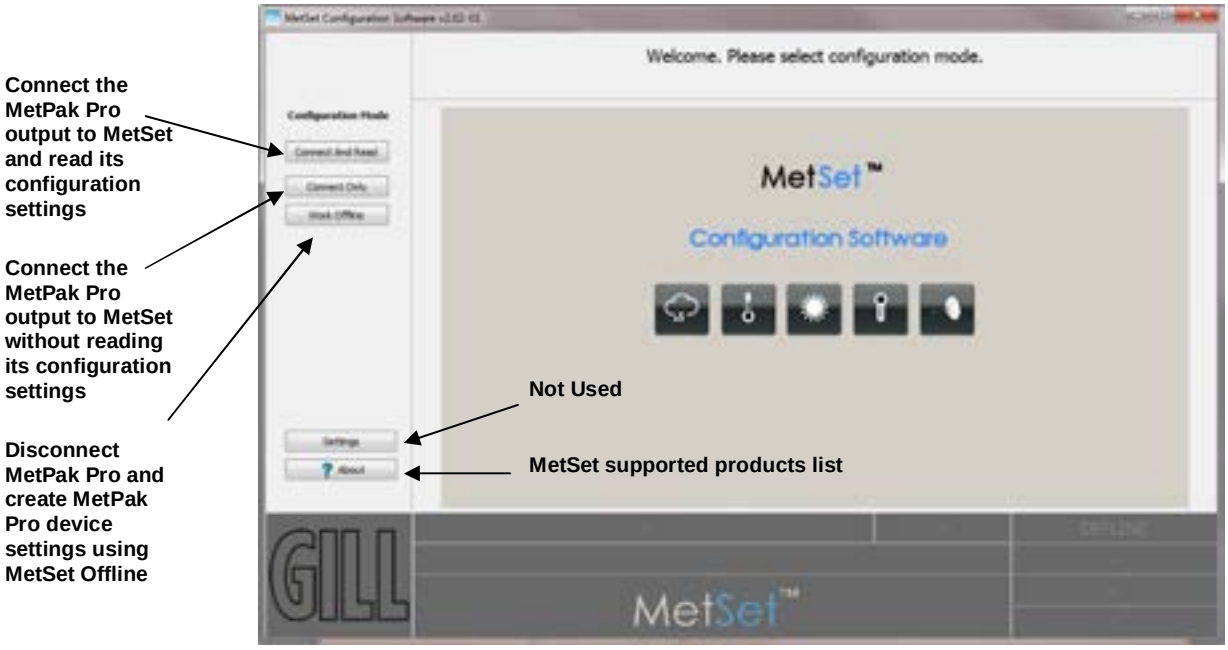
Connect the MetPak Pro output to MetSet and read its configuration settings
Connect the MetPak Pro output to MetSet without reading its configuration settings
Disconnect MetPak Pro and create MetPak Pro device settings using MetSet Offline
Welcome. Please select configuration mode.
MetSet™
Configuration Software
Not Used
MetSet supported products list
GILL
MetSet™

Figure 18 Opening MetSet Screen

MetSet interrogates the MetPak Pro Base Station and returns a summary of the device settings.

Note that MetSet also saves a copy of this screen to the connected PC as a Session Report File that can be accessed from the following destination.

C:\Program Files(X86)\Gill Instruments\MetSet\SessionReports

Summary of Device Settings

```
PROTOCOL : GILL
COMMS : RS232
(BAUD) : 19200
NODE : Q
OUTFREQ : 1HZ
MSGMODE : CONT
ASCTERM : CRLF
ECHO : ON
ALIGN : 0
SENSOR WIND : ON
UNITS WIND : MS
NODIR : 0.00
SENSOR TEMP : ON
UNITS TEMP : C
SENSOR DEWPOINT : ON
UNITS DEWPOINT : C
SENSOR PRESS : ON
UNITS PRESS : HPA
SENSOR RH : ON
UNITS RH : %
REPORT : NODE DIR SPEED PRESS RH TEMP DEWPOINT PRT AN1 AN2
         DIG1 VOLT STATUS
PUPMSG STATUS : ON
PUPMSG REPORT : ON
PUPMSG UNITS : ON
PUPMSG INPUTS : ON
SENSOR PRT : ON
UNITS PRT : C
SENSOR AN1 : OFF
SENSTYPE AN1 : NOT CONFIGURED
UNITS AN1 : #
ANIP AN1 : NOT CONFIGURED
SUBST AN1 : NOT CONFIGURED
SENSOR AN2 : OFF
SENSTYPE AN2 : NOT CONFIGURED
UNITS AN2 : #
ANIP AN2 : NOT CONFIGURED
SUBST AN2 : NOT CONFIGURED
SENSOR DIG1 : OFF
SENSTYPE DIG1 : RAIN
UNITS DIG1 : #
DIGCOUNT DIG1 : 10.000
SUBST DIG1 : NOT CONFIGURED
MODBUS : RTU
MODADDR : 1
DATABITS : 8
STOPBITS : 1
PARITY : NONE
MODTERM : 10
MODICT : 1000

Note changes to BAUD and COMMS settings will
take place after next power-up.
```

Click on the Close button to continue to the MetSet set up screen.

I

3.4.2 MetSet Editing Screen

When connected correctly a MetSet editing screen is available to read configuration settings, change configuration settings, save MetPak Pro Base Station configuration settings to a PC file location, upload MetPak Pro Base Station configuration settings from a PC file and view the MetPak Pro Base Station raw data string output.

MetSet Connection Status Information.

Reading	Function
ONLINE	ONLINE in green indicates the MetPak Pro Base Station has been successfully connected to MetSet. OFFLINE in Grey indicates that MetSet is being used without a MetPak Pro Base Station in communication with MetSet.
19200 COM 4	19200 is a report on the MetPak Pro Base Station Baud rate setting. COM 4 is a report on the MetPak Pro Base Station COM Port connection number.
S/W ver 2436-4.00	2436 is the MetPak Pro Base Station Firmware number 4.00 is the firmware revision. PV=4 is the Protocol Version (Gill Internal Reference).
Source:Device	MetSet reads 'Device' when the source of the data that MetSet has retrieved has come from the MetPak Pro Base Station. MetSet reads 'File' when the source of data has come from a saved file. MetSet reports on the connected MetPak device (METPAK PRO BASE STATION) and reads the unit Serial Number (S/N: 12520003)

MetSet Online Settings.

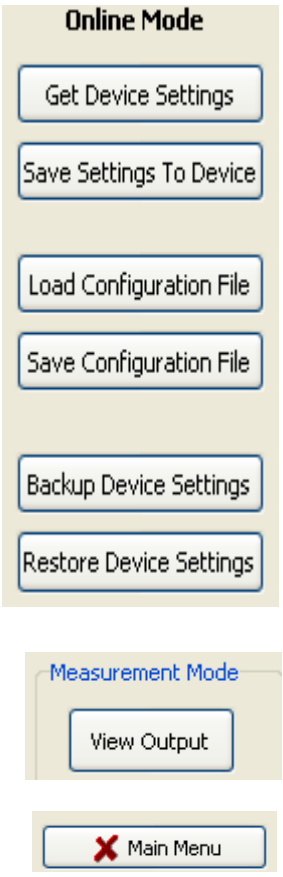

Online Mode Buttons	Function
Get Device Settings	MetSet retrieves the MetPak Pro Base Station Configuration settings.
Save Settings to Device	MetSet configuration settings are saved to a connected MetPak Pro Base Station.
Load Configuration File	When selected MetSet retrieves a MetSet edit PC file and updates MetSet with these settings.
Save Configuration File	When selected MetSet edit settings are saved to a PC file location.
Back Up Device Settings	When selected the MetPak Pro Base Station configuration settings are transferred to MetSet and then to a file location selected on a PC.
Restore Device Settings	When selected MetSet retrieves a MetPak Pro Base Station configuration setting from a PC file, loads it into the MetPak Pro Base Station and updates the MetSet edit settings.
Measurement Mode View Output	Click on View Output to view the raw ASCII MetPak Pro Base Station data string scrolling at the output rate. (View only feature). E.g. ┐ Q,014,000.06,1011.2,042.1,+023.0,+009.4,,#,#,#,+12.0,00,└ 40
Main Menu	Click here to go back to the opening MetSet screen

MetSet Editing Pages.



The Comms Page can be used to Select:-

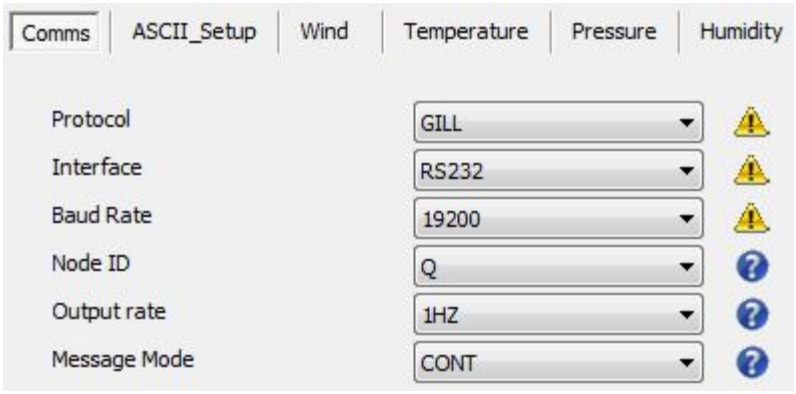

Protocol:- **GILL** or MODBUS (for SDI-12 see COMMS Interface).

Interface:- **RS232**, RS422, RS485 (point to point) and SDI-12.

Note:- SDI-12 not applicable with a WindMaster or WindMaster Pro connected to a MetPak Pro Base Station.

Baud Rate:- 4800, 9600, **19200**, 38400 or 57600

(1200 auto selected with SDI-12 setting).

Node ID:- A to P, **Q** to Z.

Output Rate:- 0.25Hz to **1Hz**.

Message Mode:-**Continuous** or Polled.

NOTE: When COMMS or Baud Rate settings are changed and Saved to Device a warning is issued by MetSet. These setting changes will not become active until the MetPak Pro Base Station power is turned off and turned on again. The connecting device will then also need its Comms and Baud rate settings changed to match the MetPak Pro Base Station.

The ASCII Set Up Page can be used to select:-

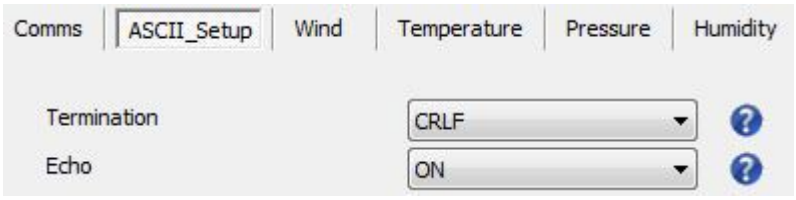

Termination:- **CRLF** or CR

Echo:- **ON** or OFF.

The Wind Page can be used to select:-

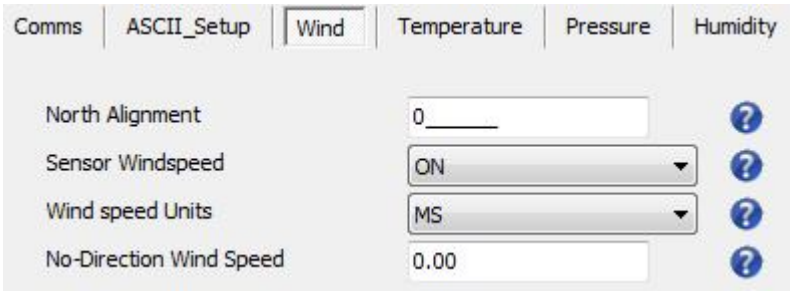

North Alignment from **0**-359 degrees.

Sensor WindSpeed **ON** or OFF.

Wind Speed Units **MS,** KTS, MPH, KPH, FPM.

(Metres/Second, Knots (Nautical miles/hour), Miles/Hour, Kilometres/Hour, Feet/Minute).

No-Direction Wind Speed **0.00** (Minimum at which Direction readings are updated).

The Temperature Page can be used to select:-

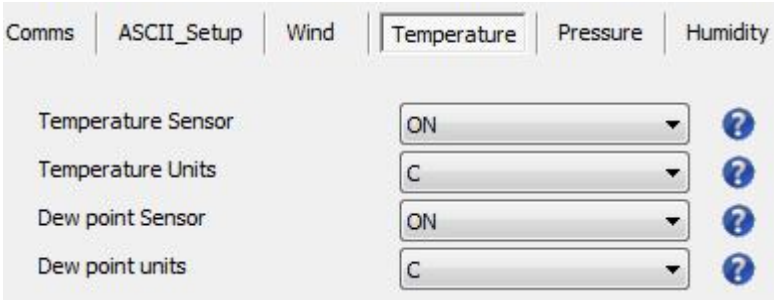

Temperature Sensor **ON** or OFF

Temperature Units **C,** K or F (Centigrade, Kelvin, Fahrenheit)

Dew Point Sensor **ON** or OFF

Dew Point Units **C**, K or F

The Pressure Page can be used to select:-

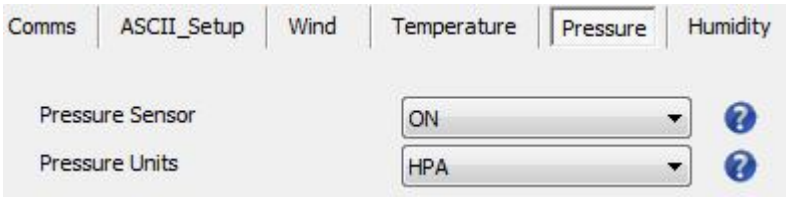

Pressure Sensor **ON** or OFF

Pressure Units **HPA**, MB, MMHG, INHG

(HectoPascals, Milli-Bars, Millimetres Mercury, Inches Mercury).

The Humidity Page can be used to select:-

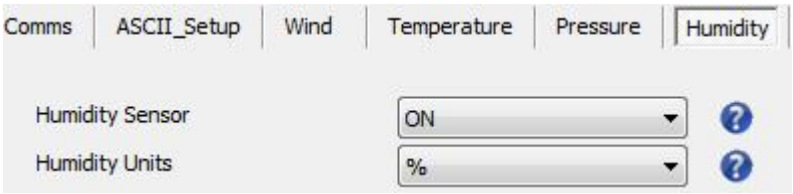

Humidity Sensor **ON** or OFF

Humidity Units **%**

© Gill Instruments Ltd

The Reporting Page with a **2 Axis** Wind Sensor connected can be used to select:-

Report Format FULL or **USERDEF**

Select Parameters to Report

NODE,DIR,SPEED,PRESS,RH,TEMP,DEWPOINT,PRT,AN1,AN2,DIG1,VOLT,STATUS.

Report parameters can be selected in any order or on or off in USERDEF.

The Reporting Page with a **3 Axis** Wind Sensor connected can be used to select:-

Report Format **FULL** or USERDEF

Select 3 axis Parameters to Report e.g.

NODE,DIR,SPEED,W-AXIS,PRESS,RH,TEMP,DEWPOINT,PRT,AN1,AN2,DIG1,VOLT,STATUS.

NODE,U-AXIS,V-AXIS,W-AXIS,PRESS,RH,TEMP,DEWPOINT,PRT,AN1,AN2,DIG1,VOLT,STATUS.

The PowerUp Page can be used to select:-

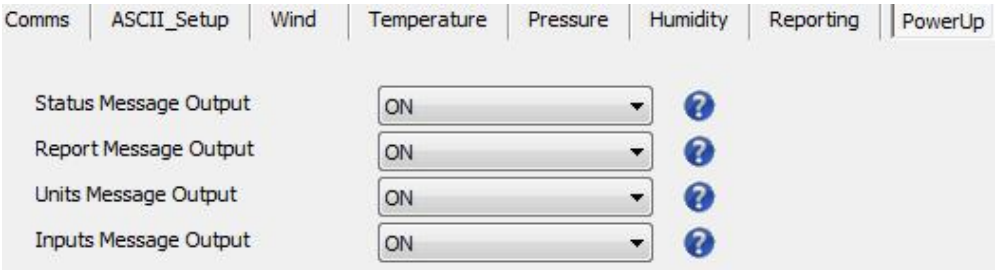

Status Message Output **ON** or OFF.

E.g. METPAK PRO BASE STATION 2436 V4.00,

STARTUP: OK.

Report Message Output **ON** or OFF.

2 Axis NODE,DIR,SPEED,PRESS,RH,TEMP,DEWPOINT,PRT,AN1,AN2,DIG1,VOLT,STATUS,CHECK.

3 Axis NODE,DIR,SPEED,W-AXIS,PRESS,RH,TEMP,DEWPOINT,PRT,AN1,AN2,DIG1,VOLT,STATUS,CHECK.

Units Message Output **ON** or OFF

E.g. 2 Axis - DEG,MS,HPA,%,C,C,C,#,#,#,V,-,-
3 Axis DEG,MS,MS,HPA,%,C,C,C,#,#,#,V,-,-

Inputs Message Output **ON** or OFF
PRT = CONFIGURED
AN1 = NOT CONFIGURED
AN2 = NOT CONFIGURED
DIG1 = NOT CONFIGURED

The PRT Page can be used to select:-

PRT Sensor **ON** or OFF

PRT Units **C**, K or F

(Celsius, Kelvin or Fahrenheit)

The output data format for PRT data is Sign (+ or -), 3 integral digits, and 2 decimal places.

The AN1 and **AN2** Pages can be used to select:-

AN1 or 2 Sensor ON or OFF

Sensor Type – Choose a title from drop down list.

Units – Allows a choice of measurement units depending on sensor chosen.

Analogue Input Type – Select Voltage or Current.

Substitute Name field available for typing in a substitute name between 3 to 8 characters long.

Low – Match to low scale of external sensor (±100000 possible).

High – Match to high scale of external sensor (±100000 possible).

MetSet AN1 and AN2 Edit pages can be used to set a MetPak Pro Base Station low value and high value range figure to be input to match the output range of the connected sensor.

For instance if a 0-5v Pressure Sensor scaled over a range of 600 to 1100 Millibars is connected to AN1, then set MetSet AN1 Edit Screen for low value 600 and high value to 1100 and save this as device setting.

The MetPak Pro Base Station will then output the actual pressure reading value e.g. 1027.1 in the AN1 position of the digital data string.

© Gill Instruments Ltd

Similarly if a 0-5v Temperature probe were used on AN2 scaled over a range –50 to +70 degrees, then set ANX low value to –50 and high value to 70.

In the event that the input voltage exceeds 5.05v dc an overflow character E will appear in the digital data string.

In the event that the input current is less than 3.96mA an error character X will appear in the digital data string.

In the event that the input current is more than 20.2mA an overflow character E will appear in the digital data string.

The DIG1 Page can be used to select:-

DIG1 Sensor **ON** or OFF

Sensor Type - Choose a title from a drop down list.

Units - Allows a choice of measurement units depending on sensor chosen. For instance MM or IN for Rain.

Count can be set from 0.001 to **10.000** in 0.001 unit steps to represent one switch closure taking place.

If using a Rain Gauge it should be set to match the Rain Gauge calibration figure for example 0.199 (mm/hr.).

Substitute Name A field available for typing in a user name between 3 to 8 characters long.

In Continuous Output Mode

A count will occur of the number of switch closure events taking place over 1 second (default 1Hz output rate or during 2 seconds (0.5Hz) or during 4 seconds (0.25Hz)) and will be output in each digital data output reading (when DIG 1 enabled).

In Polled Mode

The MetPak Pro Base Station will store and output the cumulative total number of switch closures since the last poll request. Once the cumulative total has been output the count will be reset to zero.

The maximum number of count events will be 9999, if the number counted exceeds 9999 an overflow character E will be output in the data string.

NOTE:

Once all settings have been chosen then save Edited Page Settings to MetPak Pro Base Station by clicking on ‘Save Settings to Device’ this will change the MetPak Pro Base Station configuration to reflect the new MetSet settings.

© Gill Instruments Ltd

The MODBUS Page can be used to select:-

Mode **RTU** or ASCII.

Address 1 to 247, default is **1**.

Data Bits 7 for Modbus ASCII and **8** for Modbus RTU.

Stop Bits 1 for Even/Odd Parity or **2** for No Parity.

Parity **NONE**, ODD, or EVEN.

Termination Char ASCII code 0-255, default is **10.**

Inter Char Timeout (ms) 500 to 10000, default is **1000**

© Gill Instruments Ltd

3.4.3 Monitoring MetPak Pro Base Station Output Data Using HyperTerminal.

NOTE. . This section describes the procedure using Windows HyperTerminal. Alternatively Gill Wind Software (http://www.gill.co.uk/main/software.html) can be used as a Terminal Emulator (note Tools feature not applicable). Select the required COM port and click on OK, the required 19200 Baud Rate is already selected (or use the Baudrate drop down) then continue as from step 7.

Establishing a HyperTerminal Connection

To monitor MetPak Pro Base Station data using HyperTerminal:

1. Select an available Com port and connect the MetPak Pro Base Station unit.
2. Run **Hypertrm.exe (**Typically accessed via:-
   Start | All Programs | Accessories | Communications | Hyperterminal).
3. Select **New Connection** from the **File** menu.
4. Enter a name for the connection, for example *MetPak Pro Base Station* and, optionally, select an icon to represent it. Click on the **OK** button.
5. In the *Connect To* dialog box, change *Connect Using* to *COMX* (where *X* is the number of the selected COM port). Click on the **OK** button.
6. In the *COMX Properties* dialog box, adjust the *Port settings* to match the MetPak Pro Base Station unit's settings. The default settings are :
   - Bits per second 19200
   - Data bits 8
   - Parity None
   - Stop bits 1
   - Flow Control None
7. Click on the **OK** button.

Message Reporting

MetPak Pro Base Station has two reporting modes:

- Continuous mode

In continuous mode (the default) MetPak Pro Base Station reports continuously. So, if you have set up the connection correctly, you should now see data strings scrolling across the HyperTerminal window. For example:

2 Axis wind Sensor.

```
0Q,169,000.16,1010.2,041.4,+025.5,+011.5,,#,#,#,+11.9,00,*71
```

3 Axis Wind Sensor

```
┐Q,270,000.01,-000.02,1013.8,042.7,+022.0,+008.8,,X,X,0000.000,+11.6,00,└5D
```

- Polled mode

If the unit has been set to polled mode type ?Q (where Q is the unit node letter) to prompt one line of the data string. Note, allow 9.5 seconds after switching on the unit before sending a poll command.

When polled, allow 570 milli-seconds for the unit to respond with a line of data. If the MetPak Pro Base Station detects a pressure/temperature/humidity sensor fault then allow 4 seconds for an error data output.

Enter SETUP MODE to check Ser. Number and Firmware Version

To enter the unit's setup mode:

- If the unit is in continuous reporting mode, type *.
- If the unit is in polled mode, type *Q (where Q is the unit node letter).

The MetPak Pro Base Station unit stops reporting sensor measurements and reporting (if in continuous mode) and responds with the following message:

SETUP MODE (The unit is now ready to receive commands).

Returning to measurement mode

To exit from the setup mode and return to the reporting mode:

Type **Q** and press **Enter**.

The MetPak Pro Base Station unit returns to measurement mode and begins reporting (if set up for continuous mode).

Polling for Data

The MetPak Pro Base Station unit must be set for Message Mode Poll using MetSet software (Comms Page).

A line of data will be output upon receipt of a ? followed by the Node ID (default Q).

It is recommended not to use letters A to F as these characters can appear in the checksum in the data string.

Notes:-

In Polled mode the Base Station MUST be allowed 9.5 seconds after switch on (plus Wind Sensor start up times if separately powered) to be operational before the ? and Node letter are used to enable polling or it will be missed.

When in polled mode, when data is requested allow 570 milli-seconds for the unit to respond with a line of data.

If the MetPak Pro Base Station detects a pressure/temperature/humidity sensor fault then allow 4 seconds for an error data output.

Polled mode can only be used for point to point communications; it is not possible to network units on to a common bus (except in SDI-12 mode).

MetPak Pro Base Station commands

Table 10 MetPak Pro Base Station Commands

The following Polled Mode and SET UP mode commands are applicable.

Command	Parameters	Description and examples
*****	*	Used to place the unit into a SETUP mode so that User Commands may be sent to review unit settings.
***A-Z**	*A | Z	If the unit is in polled mode this command is used to place the unit into SETUP MODE so that User Commands may be sent to change unit settings. Where Q is the default node letter but may be set between A to Z. It is however recommended not to use letters A to F as these characters can appear in the checksum in the data string.
?A-Z	A | ?B | to ?Z	Retrieves a line of data from a MetPak Pro Base Station set for Polled mode with a Node identifier set to A to Z.
EXIT		Used to change the unit from Configuration mode to Measurement mode (alternatively type Q or QUIT)
Q or QUIT		Used to change the unit from Configuration mode to Measurement mode (see also EXIT)
SERIAL		Used to report the MetPak Pro Base Station serial number. e.g. 11270001
SWVER		Returns the MetPak Pro Base Station Firmware version e.g. SWVER = 2436 V2.01

© Gill Instruments Ltd

3.4.4 Configuring MetPak Pro Base Station for SDI-12

Note: SDI-12 is not supported with a WindMaster or WindMaster Pro connected to the Base Station.

To configure a MetPak Pro Base Station unit for SDI-12:

1. Connect a MetPak Pro Base Station to a PC as described in Para 2.2.4.
2. Open MetSet as described on Page 39.
3. Click on the Edit Comms page and select SDI-12 from the drop down menu.
4. Click on Save Settings to Device on the Online Mode Menu.
5. Shut down the MetPak Pro Base Station unit.
6. Change the hardware connections for SDI-12.
7. Power up the MetPak Pro Base Station unit.

3.4.5 SDI-12 Commands

SDI-12 Command Summary

- ?! Unit Address (default is 0).
- aAb! Change unit address (a = 0).
- aM! Wind Direction/Speed (direction in Degrees, speed in Metres/Sec), Temperature (degrees C), Pressure (Hecto Pascals/millibars) and Humidity (%).
- aM1! Wind Direction/Speed (direction in Degrees, speed in Metres/Sec), Temperature (degrees C), Pressure (Hecto Pascals/millibars) and Dewpoint (degrees C).
- aM2! Wind Direction/Speed (direction in Degrees, speed in Metres/Sec) and a 2 digit Wind only Status Codes.
- aM3! Temperature (degrees C), Pressure (Hecto Pascals/millibars), Dewpoint (Degrees C) and full MetPak Pro Base Station Status Codes.
- aM4! Pressure (Hecto Pascals/millibars).
- aM5! PRT, Analogue Input 1, Analogue input 2 and Digital Input 1.
- aM6! PRT.
- aM7! Analogue Input 1 and Analogue Input 2.
- aM8! Digital Input 1.
- aM9! Power Supply Voltage (Volts).
- aD0! Request a line of the above data.

© Gill Instruments Ltd

SDI-12 Commands with CRC

- aMC! Wind Direction/Speed (direction in Degrees, speed in Metres/Sec), Temperature (degrees C), Pressure (Hecto Pascals/millibars), Humidity (%) and CRC.
- aMC1! Wind Direction/Speed (direction in Degrees, speed in Metres/Sec), Temperature (degrees C), Pressure (Hecto Pascals/millibars), Dewpoint (degrees C) and CRC.
- aMC2! Wind Direction/Speed (direction in Degrees, speed in Metres/Sec), a 2 digit Status Code and CRC.
- aMC3! Temperature (degrees C), Pressure (Hecto Pascals/millibars), Dewpoint (Degrees C) and CRC.
- aMC4! Pressure (Hecto Pascals/millibars) and CRC.
- aMC5! PRT, Analogue Input 1, Analogue input 2, Digital Input 1 and CRC.
- aMC6! PRT and CRC.
- aMC7! Analogue Input 1, Analogue Input 2 and CRC.
- aMC8! Digital Input 1 and CRC.
- aMC9! Power Supply Voltage (Volts) and CRC.
- aD0! Request a line of the above data.

SDI-12 Command Details

Command	Description	Response	Example
?!	Unit Address	a<CR><LF>	0<CR><LF>
aAb!	Change the unit address a = 0, the default. b = the new address.	b<CR><LF>	1<CR><LF>
aM!	Wind Direction/Speed (direction in Degrees, speed in Metres/Sec), Temperature (degrees-C), Pressure (Hecto Pascals/millibars), Humidity (%) and a 2 digit Status Code	atttn<CR><LF> a is unit identifier. ttt is time in seconds. n is number of data values. Measurement command to retrieve a reading of the maximum time the MetPak Pro Base Station will take to complete a measurement, have data ready and the number of data values.	00055<CR><LF> 0 is unit identifier. 005 is 5 sec. measurement. 5 is the number of data readings (Direction, Speed, Temperature, Pressure and Humidity).
0D0!	Retrieve a line of the above data.	a<dir><mag><temp><pressure><humidity><CR><LF>	0+220+000.01+021.6+1013.0+041.9<CR><LF>

© Gill Instruments Ltd

aM1!	Wind Direction/Speed (direction in Degrees, speed in Metres/Sec), Temperature (degrees C), Pressure (Hecto Pascals/millibars) and Dewpoint (degrees C).	atttn<CR><LF>	00055<CR><LF>
0D0!	Retrieve a line of the above data.	a<dir><mag><temp><pressure><dewpoint><CR><LF	0+357+000.03+021.6+1013.0+008.0<CR><LF>
aM2!	Wind Direction/Speed (direction in Degrees, speed in Metres/Sec) and a 2 digit Wind only Status Code.	atttn<CR><LF>	00053<CR><LF>
0D0!	Retrieve a line of the above data.	a<dir><mag><status><CR><LF>	0+029+000.01+00<CR><LF>
aM3!	Temperature (degrees C), Humidity (%), Dewpoint (Degrees C) and Full Sensor Status Codes.	atttn<CR><LF>	00054<CR><LF>
0D0!	Retrieve a line of the above data.	a<temp><humidity><dewpoint>< CR><LF	0+021.6+041.0+007.8+00<CR><LF>
aM4!	Pressure (Hecto Pascals/millibars).	atttn<CR><LF>	00051<CR><LF>
0D0!	Retrieve a line of the above data.	a<pressure><CR><LF>	0+1013.0<CR><LF>
aM5!	PRT, Analogue Input 1, Analogue Input 2 and Digital Input 1	Atttn<>CR><LF>	00054<CR><LF>
0D0!	Retrieve a line of the above data.	a<prt><AI1><AI2><dig1><CR>< LF	0+027.65+0.0034-099903+0135.000<CR><LF>
AM6!	PRT.	atttn<CR><LF>	00051<CR><LF>
0D0!	Retrieve a line of the above data.	a<prt><CR><LF>	0+027.65<CR><LF>
AM7!	Analogue Input 1 and Analogue Input 2	Atttn<>CR><LF>	00052<CR><LF>
0D0!	Retrieve a line of the above data.	a<AI1><AI2><CR><LF	0+3.5380+017947<CR><LF>
AM8!	Digital Input 1.	atttn<CR><LF>	00051<CR><LF>
0D0!	Retrieve a line of the above data.	a<dig1><CR><LF>	0+0408.000<CR><LF>
aM9!	Power Voltage (Volts)	atttn<CR><LF>	00011<CR><LF>
0D0!	Retrieve a line of the above data.	a<voltage><CR><LF>	0+12.5<CR><LF>

Command	Description	Response	Example
aMC!	Wind Direction/Speed (direction in Degrees, speed in Metres/Sec), Temperature (degrees-C), Pressure (Hecto Pascals/millibars) Humidity (%) and CRC.	atttn<CR><LF> a is unit identifier. ttt is time in seconds. n is number of data values. Measurement command to retrieve a reading of the maximum time the MetPak II/MetPak II R will take to complete a measurement, have data ready and the number of data values.	00056<CR><LF> 0 is unit identifier. 005 is 5 sec. measurement. 6 is the number of data readings (Direction, Speed, Temperature, Pressure, Humidity and CRC).
0D0!	Retrieve a line of the above data.	a<dir><mag><temp><pressure> <humidity><CRC><CR><LF>	0+139+000.06+022.2+1017.8 +042.7+00BIQ<CR><LF>
aMC1!	Wind Direction/Speed (direction in Degrees, speed in Metres/Sec), Temperature (degrees C), Pressure (Hecto Pascals/millibars), Dewpoint (degrees C) and CRC.	atttn<CR><LF>	00056<CR><LF>
0D0!	Retrieve a line of the above data.	a<dir><mag><temp><pressure> <dewpoint><CRC><CR><LF	0+140+000.06+022.2+1017.7 +009.0+00D{Z<CR><LF>
aMC2!	Wind Direction/Speed (direction in Degrees, speed in Metres/Sec), a 2 digit Status Code and CRC.	atttn<CR><LF>	00053<CR><LF>
0D0!	Retrieve a line of the above data.	a<dir><mag><status><CRC ><CR><LF>	0+098+000.04+00@sh<CR><LF>
aMC3!	Temperature (degrees C), Humidity (%), Dewpoint (Degrees C) and CRC.	atttn<CR><LF>	00053<CR><LF>
0D0!	Retrieve a line of the above data.	a<temp><humidity><dewpoint> <CRC><CR><LF	0+022.2+042.7+009.0LV{<CR><L F>
aMC4!	Pressure (Hecto Pascals/millibars) and CRC.	atttn<CR><LF>	00051<CR><LF>
0D0!	Retrieve a line of the above data.	a<pressure><CRC><CR> <LF>	0+1017.8GM <CR><LF>
aMC5!	PRT, Analogue Input 1, Analogue Input 2, Digital Input 1 and	Atttn<>CR><LF>	00054<CR><LF>

© Gill Instruments Ltd

	CRC.		
0D0!	Retrieve a line of the above data.	a<prt><AI1><AI2><dig1>< CRC><CR>< LF	0-001.19+0000.6+0000.4+0000.000 CQx <CR><LF>
aMC6!	PRT and CRC.	atttn<CR><LF>	00051<CR><LF>
0D0!	Retrieve a line of the above data.	a<prt><CRC><CR><LF>	0-001.19IT@<CR><LF>
aMC7!	Analogue Input 1, Analogue Input 2 and CRC.	Atttn<>CR><LF>	00052<CR><LF>
0D0!	Retrieve a line of the above data.	a<AI1><AI2><CRC><CR> <LF	0+0000.6+0000.4FE~<CR><LF>
aMC8!	Digital Input 1 and CRC.	atttn<CR><LF>	00051<CR><LF>
0D0!	Retrieve a line of the above data.	a<dig1><CRC><CR><LF>	0+0000.000EgO<CR><LF>
aMC9!	Power Voltage (Volts) and CRC	atttn<CR><LF>	00011<CR><LF>
0D0!	Retrieve a line of the above data.	a<voltage><CRC><CR> <LF>	0+12.2K@R<CR><LF>

© Gill Instruments Ltd

3.4.6 Configuring MetPak for MODBUS

MetPak Supported Modbus Specification

MODBUS RTU or ASCII.

Baud Rate 9600 or 19200 Baud.

COMMS RS232 point to point only, RS485 2 wire networkable.

Modbus Parameters ASCII or RTU.

Parameter	Modbus ASCII		Modbus RTU	
Character	ASCII 0 to 9 and A to F (Hex)		Binary 0 to 255	
Error Check	Longitudinal Redundancy Check (LRC)		Cyclic Redundancy Check (CRC)	
Frame Start	Character ':' (3A Hex)		3.5 Characters Silence	
Frame End	Characters CR/LF (0D/0A Hex)		3.5 Characters Silence	
Gaps in Message	1 Second		1.5 Times Character Length	
Start Bit	1		1	
Data Bits	7		8	
Parity	Even/Odd	None	Even/Odd	None
Stop Bits	1	2	1	2

Requires:-

MetPak Pro with version 2346-4.00 firmware and onwards.

MetSet Software version 2.02-02 and onwards.

Connect a MetPak Pro to a PC COM port (default communication is RS232).

Open Gill MetSet Software.

Click on Connect and Read to reach the Editing Pages as shown below.

Configuration

Click on the MODBUS Page

Mode: Choose between RTU and ASCII, in this case RTU.

Address: Choose a MetPak Address number to be between 1 to 247.

Data Bits: Choose 7 for Modbus ASCII and 8 for Modbus RTU.

Stop Bits: Choose 1 for Even/Odd Parity or 2 for No Parity (None).

Parity: Choose Even/Odd or None.

Termination Char ASCII code: Choose between 0-255.

Inter Char Timeout (ms): Choose between 500ms to 10000ms.

© Gill Instruments Ltd

Select the COMMS Page

Protocol: Default is Gill. Select MODBUS

Interface: Default is RS232. Select RS232 or RS4852W. RS232 will only allow a single point to point non multi drop network connection. RS485 2 wire will allow networking with up to 32 connected devices.

Baud Rate: Default is 19200. Select required Baud rate (9600 or 19200 supported).

Node ID: Default is Q. Not used for MODBUS.

Output Rate: Default is 1Hz. Set update rate for MetPak Data (0.25Hz to 1Hz).

Message Mode: Default is CONT. Select POLL mode and MetPak will only make and output a measurement (set by the output rate) on demand from the Modbus Master. In CONTinuous mode the MetPak continuously makes measurements set by output rate (0.25Hz to 1Hz) and only outputs a result when demanded from the Modbus Master.

When required settings have been selected click on Save Settings to Device

Warning
Changes to BAUD, COMMS and PROTOCOL settings will not be activated until power to the device is turned off and on again.
Communication with a PC or logger system may be affected.
OK

Click on Yes and OK.

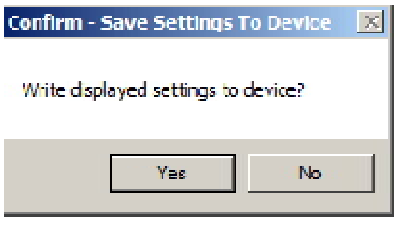

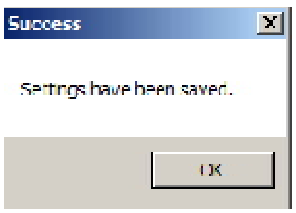

Power down the MetPak and apply power back to the MetPak to complete setting changes.

Note: now that the unit is in MODBUS mode if any further changes need to be made use the SAFE MODE connection and method to re-establish communication with MetSet.

METPAK MODBUS NOTES

1. All registers are 16bit.
2. The first byte is high order and the second is low.
3. Each measurement is comprised of two 16bit registers.
4. The registers are arranged High Word/ Low Word.
5. Registers start at address 40001.
6. Holding registers available in the order of the MetPak data string (which can be established by the REPORT command in non-Modbus Gill ASCII Mode).

MetPak Pro MODBUS Default Data String Field Encoding:

Node	4-byte character string	Registers 40001-2.
Direction:	32 Bit Floating point value	Registers 40003-4.
Speed:	32 Bit Floating point value	Registers 40005-6.
Pressure:	32 Bit Floating point value	Registers 40007-8.
Temperature:	32 Bit Floating point value	Registers 40009-10.
Relative Humidity:	32 Bit Floating point value	Registers 400011-12.
Dewpoint:	32 Bit Floating point value	Registers 400013-14.
PRT:	32 Bit Floating point value	Registers 400015-16.
AN1:	32 Bit Floating point value	Registers 400017-18.
AN2:	32 Bit Floating point value	Registers 400019-20.
DIG1:	32 Bit Floating point value	Registers 400021-22.
Supply Voltage:	32 Bit Floating point value	Registers 400023-24.
Status:	32 bit Unsigned Integer (UINT)	Registers 400025-26.

See Simply Modbus program reading example MetPak Pro MODBUS Data as follows:-

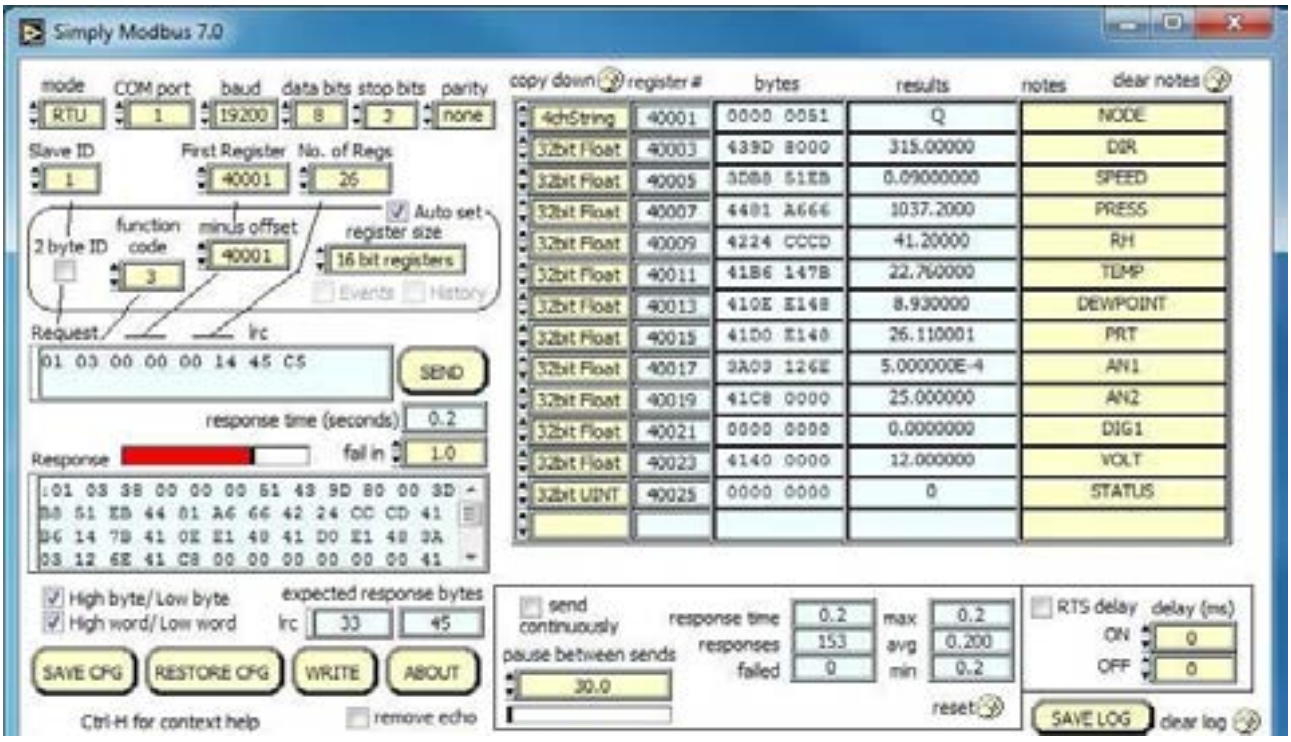

3.4.7 Safe Mode

Summary

The MetPak Pro Base Station Safe Mode provides a means of recovering communication with the MetPak Pro Base Station whatever configuration setting may have been made. For instance if the unit has been set for SDI-12 operation Safe Mode can be used to change the communication option back to RS232 or RS422.

Connection

Connect the MetPak Pro Base Station for RS232 communication as detailed on Page 11, Figure 6.

Method

Note at this stage the MetPak Pro Base Station supply to be switched off.

Open a Terminal program e.g. Gill WIND Software (http://www.gill.co.uk/main/software.html) or Windows HyperTerminal

Note if using Gill Wind Software that the Tools features are not applicable.

Open Gill Wind Software.

Serial Port: Set the drop down menu to the required COM Port Connection.

Click on the **OK** button.

Baudrate: Set the drop down menu to **4800** Bauds.

A blank Wind Terminal screen will be opened.

Hold down the * key on the keypad.

With the * key still held down, apply power to the MetPak Precipitation.

This will result in placing the unit into SAFE MODE.

Press Enter to start a new line (Ignore illegal command line).

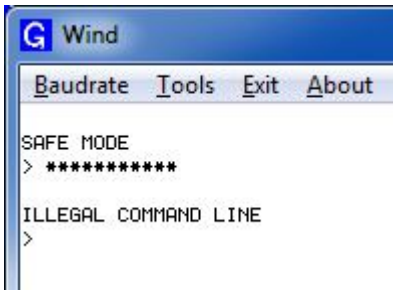

To now change communication from SDI-12 to RS232.

Type COMMS RS232 and press Enter.

Type Q and press Enter to exit SAFE MODE.

Data will now scroll on screen.

Note however for RS232 changes to take place the unit must be powered down and back up again.

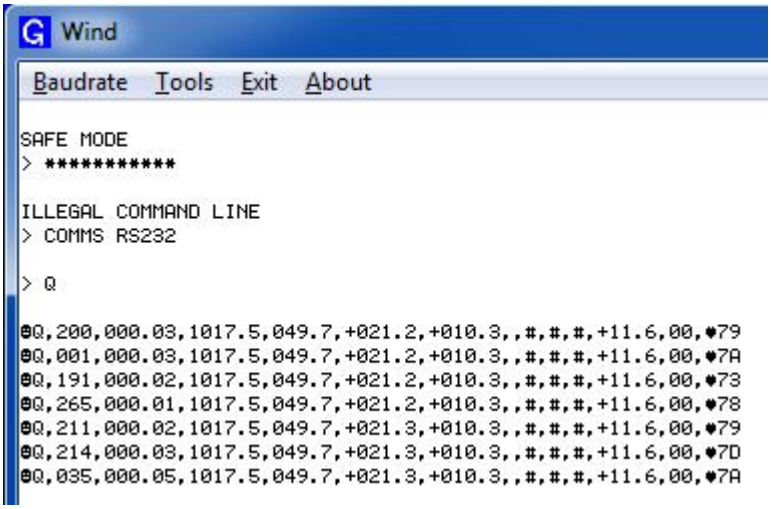

Close the 4800 baud rate Wind or HyperTerminal Program.

Power down the MetPak Pro Base Station and re-apply power.

Open a new Wind or HyperTerminal program at **19200 baud** rate.

RS232 data will now scroll on screen at the MetPak Pro Base Station default 19200-baud rate**.**

© Gill Instruments Ltd

4. Troubleshooting

4.1 Fault-Finding

Table 11 Common problems and their solution

Symptom	Solution
No output	Check DC power to MetPak Pro Base Station, cable and connections. Check communications settings of the MetPak Pro Base Station and host system match, including correct Com port. Check that the unit is in Continuous mode. Check that in-line communication devices are wired correctly. NOTE: It is usual for Anemometer TX + to be connected to converter device RX +. If appropriate use Safe Mode to attempt to obtain communication with the MetPak Pro Base Station.
Corrupted output	Check that the communication settings of the MetPak Pro Base Station and host system match. Try a slower baud rate. Check cable lengths and type of cable.
One way communication	Check that the wiring is in accordance with the manual.
Unexpected Temperature /Dewpoint readings	Check that the Temperature and Dewpoint units of measure (C, F, K) settings are correct on power up.
Unexpected Wind readings	Check that the Wind Sensor units of measure (m/s, knots, kph, ft/min, mph) settings are correct on power up.
Unexpected Temperature/Dewpoint and Humidity readings	Check that the HygroClip filter is clean.
Unexpected Barometer Readings	Check that the Hub Box Gortex filter is not blocked.
Status code not 00	See Table 12

© Gill Instruments Ltd

Table 12 Status codes as output with the MetPak Pro Base Station data string

Code	Status	Condition
00	OK	No fault conditions detected in measurement period.
01	Wind Sensor Axis 1 failed	U Axis blocked or faulty.
02	Wind Sensor Axis 2 failed	V Axis blocked or faulty.
03	Wind Sensor Axis 3 failed	W Axis blocked or Faulty (WindMaster/Pro only).
04	Wind Sensor Axis 1 and 2 failed	U and V axis blocked or faulty.
05	Wind Sensor Axis 1 and 3 failed	U and W axis blocked or faulty (WindMaster/Pro only).
06	Wind Sensor Axis 2 and 3 failed	V and W axis blocked or faulty (WindMaster/Pro only).
07	Wind Sensor Axis 1,2 and 3 failed	U, V and W axis blocked or faulty (WindMaster/Pro only).
08	Wind Sensor NVM error	Non Volatile Memory checksum failed, data could be uncalibrated.
09	Wind Sensor ROM error	Read Only Memory checksum failed, data could be uncalibrated.
0B	Wind Sensor reading failed.	Wind Sensor faulty.
10	Hygroclip error	Hygroclip faulty.
20	Dewpoint error	Hub Pec faulty.
40	Humidity error	Hygroclip faulty.
66	Wind Sensor Power	Check Wind Sensor is powered
67	Wind Sensor RS422 Communications	Check RS422 communication wiring
80	Pressure Sensor Warning	Pressure sensor reading not available/unit faulty.
FF	No Wind Data	Remote sensor wiring or communication format (not RS422) fault.
XX	More than one fault	Fault condition that can be the sum of 0B,10, 20 or 40. e.g. 1B would mean that both the Wind Sensor (0B) and Hygroclip (10) were faulty.

© Gill Instruments Ltd

4.2 Servicing

In the event of failure, prior to returning to an authorised Gill distributor it is recommended that:

- All cables and connectors are checked for continuity, bad contact, corrosion etc.
- A bench test is carried out as described in the next section.

Contact your supplier if a fault persists.

4.3 Bench Tests

Carry out a bench test as follows:

1. Connect the MetPak Pro Base Station unit to the host PC and power supply, using a known working test cable.
2. Check that the unit is correctly configured by going into Set Up mode using MetSet.
3. Check for normal output data, and that the Status Code is OK – 00.
4. If the status code is other than 00, refer to Table 12 for a list of status (error) codes.
5. Use an office fan or similar to check that the unit is sensing wind, turning the Wind Sensor to simulate changing wind direction and to check that axes are functioning.
6. Check for output changes in temperature and relative humidity sensor (the fan will also cause small changes in these properties).

© Gill Instruments Ltd

5. Maintenance

Wind Sensor

If there is any build-up of deposits on the unit, it should be gently cleaned with a cloth, moistened with soft detergent. Solvents should not be used, and care should be taken to avoid scratching any surfaces. The unit must be allowed to defrost naturally after being exposed to snow or icy conditions, do NOT attempt to remove ice or snow with a tool.

There are no moving parts or user-serviceable parts requiring routine maintenance.

Opening the unit or breaking the security seal will void the warranty and the calibration.

UV Shield (MetSpec Model Rad 16)

If there is any build-up of deposits on the unit, it should be gently cleaned with a cloth, moistened with soft detergent. Solvents should not be used, and care should be taken to avoid scratching any surfaces. The unit must be allowed to defrost naturally after being exposed to snow or icy conditions, do NOT attempt to remove ice or snow with a tool.

HygroClip for Temperature, Humidity and Dewpoint (Rotronic Model HC2-S3-GI)

For extreme environments such as maritime installations, chemical plants or other areas of high pollution or contamination, Gill highly recommend replacement of the temperature and humidity probe filter every 6 months to 12 months to ensure proper performance.
Corroded, discoloured or clogged dust filters should be replaced.

If the filter is not replaced it is very likely you will see elevated humidity levels with time and if this is allowed to develop for a longer period of time it can lead to permanent damage on the electronics of the temperature probe due to the very high moisture content and corrosive effect of the pollutant or salt.

<u>Rotronic Temperature and Humidity filter replacement:</u>

The Rotronics polycarbonate dust filter screw-on cap is available from:-

Gill Instruments	Part Number	1723-PK-025 (2 filters).
Rotronic	Part Number	NSP-PCW-PE (1 filter).

If you need to replace the dust filter cap, carefully unscrew it and withdraw carefully avoiding contact with the Temperature and Humidity circuit board. When re-fitting the filter cap, ensure the circuit board connections are not bent.

Consideration should be given to an annual calibration check of the HygroClip sensor by the manufacturer.

If you are replacing the whole cartridge, unscrew the metal ferrule and return the probe to Rotronic for calibration. Refer to the Rotronic Website for more details:

http://www.rotronic-humidity.com/content/meta/kontakt.php

NOTE. If you return the sensor to a HygroClip supplier for exchange, please request that the return unit has the dewpoint feature enabled (HCS2-S3-**GI**).

© Gill Instruments Ltd

Barometer (on Hub PCB)

The Barometer device is maintenance-free, however, if required observe the following with regard to the central Hub box screw cap Gore-Tex® filter.

Pressure Sensor Filter Replacement:

There is a small venting filter for the pressure sensor of the MetPak Pro Base Station located on the 'Hub' box lid which ensures proper conditions are present in the MetPak Pro Base Station 'hub' box for pressure measurements without allowing any moisture or other damaging pollutants into the box. This filter is made from Gore-Tex® material and is designed to last a long time without replacement, however, Gill do recommend that this filter is replaced every 24 months to ensure proper operation of the pressure sensor and to keep the electronics inside the 'hub' box dry.

If you do not replace the filter every 24 months you may start to see elevated or erroneous readings of the pressure sensor with time and this behaviour can be corrected by replacement of the Gore-Tex® filter unit.

The Gore-Tex® filter kit is available from:-

Gill Instruments Part Number 1723-PK-024.

To replace the filter, unscrew the 4 screws retaining the hub box lid. Remove the existing Gore-Tex filter and M12 Nut. Fit and secure the new filter with the nut provided. Re-fit the 4 lid screws.

Should you be uncertain as to how often you should be replacing the filters for your application or if you wish to discuss this in more detail please contact Gill support and we will be able to provide a recommendation for you.

Returning the MetPak Pro Base Station

If the unit has to be returned, it should be carefully packed in the original packaging and returned to your authorised Gill distributor, with a full description of the fault condition. An RMA number should be obtained from Gill Instruments first if returning directly to Gill Instruments.

© Gill Instruments Ltd

6. Technical Information

6.1 Specification

Wind Measurement	
Parameters	Polar Wind Speed & Direction (2 axis sensor) plus Vertical axis (3 axis sensor) or U and V Vectors (2 axis sensor) or U, V and W vectors for 3 axis sensor.
Units of Measurement	m/s, knots, mph, kph, ft/min

Wind Speed - Refer to Supplied Anemometer Manual for full details	
Range	0-45m/s WindMaster 0-60m/s WindSonic/WindSonic M 0-65m/s WindMaster Pro 0-70m/s WindObserver 70
Accuracy	± 2% @12m/s
Resolution	0.01m/s
Threshold	0.01m/s
Wind Direction - Refer to Supplied Anemometer Manual for full details	
Range	0-359 Degrees – No dead band
Accuracy	± 3°@12m/s WindSonic Option 2 and WindSonic M ± 2°@12m/s all other Sensors
Resolution	1°

Air Temperature	
Type	Pt100 1/3 Class B
Range	-35°C to + 70°C
Accuracy	±0.1°C
Resolution	0.1°C (0.1°F)
Units of Measure	°C or °F
Relative Humidity	
Range	0-100%
Accuracy	±0.8%@23°C
Resolution	0.1%
Units of Measure	% RH

© Gill Instruments Ltd

Dew Point	
Resolution	0.1°C (0.1°F)
Accuracy	±0.15°C (23°C ambient temp @20°C dew point)
Units of Measure	°C or °F
Barometric Pressure	
Range	600 to 1100hPa
Accuracy	±0.5hPa
Resolution	0.1hPa
Units of Measure	hPa, mbar, mmHg, InHg
Compensated for Temperature dependency –20°C to +70°C	
Inputs (Base Station)	
Analogue 1	0 to 5V or 4 to 20mA MetPak Pro Base Station powered or Analogue Sensor Powered
Analogue 1	0 to 5V or 4 to 20mA MetPak Pro Base Station powered or Analogue Sensor Powered
Analogue Input A-D Conversion	12 bit resolution with an accuracy of ± 0.1% of reading , +35uV offset (voltage inputs) or ± 0.5uA (current inputs).
Analogue Input Impedance	Input impedance for 0-5v input is 330 kohm. Input impedance for 4-20mA input is 47 ohms.
PRT	4 wire PRT, Pt100 conforms to IEC 60751
Digital Input (Rain Gauge)	Contact Closure input (tipping bucket rain gauge) capable of capturing events up to 10Hz
Digital Input	Capable of detecting an event with a duration of greater than 1.4mS.
Digital Input	Capable of detecting a space between events (i.e. terminals open-circuit) with a duration of greater than 11mS.
Digital Input	Capable of reading a switch contact closure providing the total Digital Switch contact resistance (contact and cabling) is less than 1k ohm.
Outputs	
Digital Outputs	RS232, RS422, *RS485 (*2 wire point to point) or SDI-12
Baud Rates	(RS232 point to point and RS485 2 wire networkable – MODBUS RTU/ASCII)
Protocols	1200 (SDI-12), 4800-57600 (ASCII RS232, RS422, *RS485)
Data Output	0.25, 0.5, 1 Hz or Polled Mode.
MetPak Pro Base Station Status	Status codes provided within the data message string
***** RS485 2 wire point to point only.	

Power Supply	
Input voltage (RS232, RS422, RS485)	12v to 30v dc
Current	Default setting (first value is Base Station current) 23mA + 9mA at 12v with WindSonic Option 2 23mA + 9mA at 12v WindSonic M (plus heater power) 23mA + 50mA at 12v WindObserver 70 (plus Heater power) 23mA + 55mA at 12v WindMaster/WindMaster Pro
Input voltage (SDI-12)	9.6v to 16v dc (12v nominal)
Current	12.1mA + 9mA at 12v with a WindSonic Option 2 12.1mA + 9mA at 12v with a WindSonic M (plus heater power) 12.1mA + 50mA at 12v with a WindObserver 70 (plus heater power) SDI-12 not applicable with WindMaster/Pro

Environmental – Base Station	
Protection Class	IP65
EMC	EN 61326
Operating Temperature	-35°C to +70°C
Storage Temperature	-40°C to +80°C
Operating Humidity	0% to 100% Humidity

Mechanical – Base Station	
External Construction	UV Stabilised white thermoplastic (Wind Sensor and Hygroclip Mountings) and anodized Aluminium bracket.
Fittings	Stainless Steel 316 bracket fittings supplied for clamping to a vertical pipe diameter of diameter 30mm to 58mm.
Overall Dimensions	201mm x 278mm x 129mm (excluding bracket clamp)
Weight	1.7kg (including bracket)

Software – Base Station	
MetView Display	Free Software providing the means of displaying data and logging data
MetSet Configuration	Free Software providing the means of configuration of the MetPak Pro Base Station

© Gill Instruments Ltd

6.2 MetPak Pro Base Station Hub PCB Connections

The following tables summarise the connections for:

- HygroClip
- WindSonic anemometer
- RS232/RS422/RS485/SDI-12 communications
- PRT
- Digital Input
- Analogue Inputs

Connection details are also found within the MetPak Pro Base Station Hub box.

Factory Connections

Table 13 HygroClip connections (6-way connector J1)

Connector J1	Wire Colour	Signal Name
1	-	No Connection
2	Blue	RXD from HygroClip UART
3	Red	TXD to HygroClip UART
4	Yellow	Analogue 0V (Not Used)
5	Grey	Supply-ve /Signal 0V
6	Green	Supply +ve (+3.3V DC)

Table 14 Wind Sensor 10 Metre Cable connections (8-way connector J4)

Connector J4	Wire Colour	Signal Name
1	Brown/White	RSR422+ Anemometer Output to Hub
2	Blue/White	RS422+ Hub Output to Anemometer
3	White/Brown	RSR422- Anemometer Output to Hub
4	White/Blue	RS422- Hub Output to Anemometer
5	Green/White	Signal Ground
6	White/Orange	Supply –ve
7	-	No Connection
8	Orange White	Supply +ve
-	White/Green	Screen to Chassis

© Gill Instruments Ltd

User Connections

Table 15 PC communications (8-way connector, J5)

Connector J5	Signal Name
1	SDI-12 TX/RX
2	Signal 0V
3	**RS232 TX-**, (or RS422/RS485 TX-) HUB to user
4	**RS232 RX-**, (or RS422 RX-) User to HUB
5	RS422 RX+, User to HUB
6	RS422/RS485 TX+, HUB to User
7	**Supply 0v**
8	**Supply +ve (12v to 30v dc)**

Table 16 PRT Sensor (4-way connector, J7)

Connector J7	Signal Name
1	PWR (PRT Power Supply +ve)
2	PRT +
3	PRT -
4	GND (PRT Power Supply Ground)

Table 17 Digital Switch Input (2-way connector, J8)

Connector J8	Signal Name
2	DIG1 (Digital Switch Contact Input)
1	GND (Ground)

Table 18 Analogue Sensors Input (8-way connector, J9)

Connector J9	Signal Name
1	VI 1 (Voltage Input 1)
2	GND (Voltage Input 1 Ground)
3	VI 2 (Voltage Input 2)
4	GND (Voltage Input 2 Ground)
5	II PWR (Current Supply for Analogue Input 1)
6	II 1 (Analogue Input 1)
7	II PWR (current Supply for Analogue Input 2)
8	II 2 (Analogue Input 2)

© Gill Instruments Ltd

6.3 Electrical Conformity Certificate

EC DECLARATION OF CONFORMITY ACCORDING TO COUNCIL DIRECTIVE 2004/108/EC

We, Gill Instruments Ltd., declare under our sole responsibility that the products:

MetPak Pro Base Station

Manufactured by: Gill Instruments Ltd

to which this declaration relates, are in conformity with the protection requirements of Council Directive 2004/108/EC on the approximation of the laws relating to electromagnetic compatibility.

This Declaration of Conformity is based upon compliance of the product with the following harmonised standards:

Emissions	EN61326
Immunity	EN61326

Signed by: 

A.C.R. Stickland – Director

Date of issue: 11/01/2013

Place of issue: Gill Instruments Ltd
Saltmarsh Park, 67 Gosport Street,
Lymington, SO41 9EG, UK

© Gill Instruments Ltd